

# ELECTRONIC CROSSOVER NETWORK

## SF-700

| ROUND LABEL<br>UNIT | FV      | KC      | KL      |  |  |  |
|---------------------|---------|---------|---------|--|--|--|
| FM FRONT END        |         |         |         |  |  |  |
| FM IF UNIT          |         |         |         |  |  |  |
| MPX UNIT            |         |         |         |  |  |  |
| AM TUNER UNIT       |         |         |         |  |  |  |
| MUTING UNIT         |         |         |         |  |  |  |
| HEAD AMP UNIT       |         |         |         |  |  |  |
| CONTROL AMP UNIT    |         |         |         |  |  |  |
| MAIN AMP UNIT       |         |         |         |  |  |  |
| POWER SUPPLY UNIT   |         |         |         |  |  |  |
| SWITCH UNIT         |         |         |         |  |  |  |
| SWITCH UNIT         |         |         |         |  |  |  |
| SWITCH UNIT         |         |         |         |  |  |  |
| TONE COLOR UNIT     |         |         |         |  |  |  |
| CONTROL UNIT        |         |         |         |  |  |  |
| MIC AMP UNIT        |         |         |         |  |  |  |
| FILTER UNIT         | W38-002 | W38-002 | W38-002 |  |  |  |
| REVERBE UNIT        |         |         |         |  |  |  |
|                     |         |         |         |  |  |  |
|                     |         |         |         |  |  |  |





SF-700 for KC, KL model

SF-700

SWITCHES

- S<sub>1</sub> CROSSOVER FREQ. SELECTOR (MID-HIGH)  
 1) OFF  
 2) 1kHz  
 3) 2kHz  
 4) 4kHz  
 5) 6kHz  
 6) 8kHz
- S<sub>2</sub> CROSSOVER FREQ. SELECTOR (LOW-MID)  
 1) 125Hz  
 2) 250Hz  
 3) 500Hz  
 4) 700Hz  
 5) 1kHz  
 6) OFF

- S<sub>3</sub>~S<sub>4</sub> SLOPE SELECTOR  
 S<sub>3</sub> HIGH S<sub>4</sub> MID-HIGH  
 S<sub>5</sub> MID-LOW S<sub>6</sub> LOW  
 1) 6dB/oct  
 2) 12dB/oct  
 3) 18dB/oct
- S<sub>7</sub> POWER SWITCH

- RESISTORS  
 NONMARK: ΩHM  
 K: KILOHM  
 M: MEGOHM
- CAPACITORS  
 NONMARK: μF  
 P: pF

