

AM/FM STEREO TUNER

TX-1000

ROUND LABEL UNIT	FVZW	FW	KUW	KW		
FM FRONT END	AWB-005	W11-043	W11-043	W11-043		
FM IF UNIT	AWC-004	AWC-004	AWC-004	AWC-004		
MPX UNIT	W13-028	W13-028	W13-028	W13-028		
AM TUNER UNIT	W14-016	W14-016	W14-016	W14-016		
MUTING UNIT	AWM-007	AWM-007	AWM-007	AWM-007		
AF UNIT	AWK-002	AWK-002	AWK-002	AWK-002		
HEAD PHONE UNIT	W28-005	W28-005	W28-005	W28-005		
MAIN AMP UNIT						
POWER SUPPLY UNIT	W16-034	W16-034	W16-034	W16-034		
SWITCH UNIT						
SWITCH UNIT						
SWITCH UNIT						
TONE COLOR UNIT						
CONTROL UNIT						
MIC AMP UNIT						
REVERBE AMP UNIT						
REVERBE UNIT						



TX-1000

FM 75Ω UNBALANCED


FM 300Ω BALANCED

GND

AM

RESISTORS
NON MARK : OHM
K : KILOHM
M : MEGOHM
CAPACITORS
NON MARK : μF
P : μμF


V : DC VOLTAGE AT NO INPUT SIGNAL
← : DC CURRENT AT NO INPUT SIGNAL

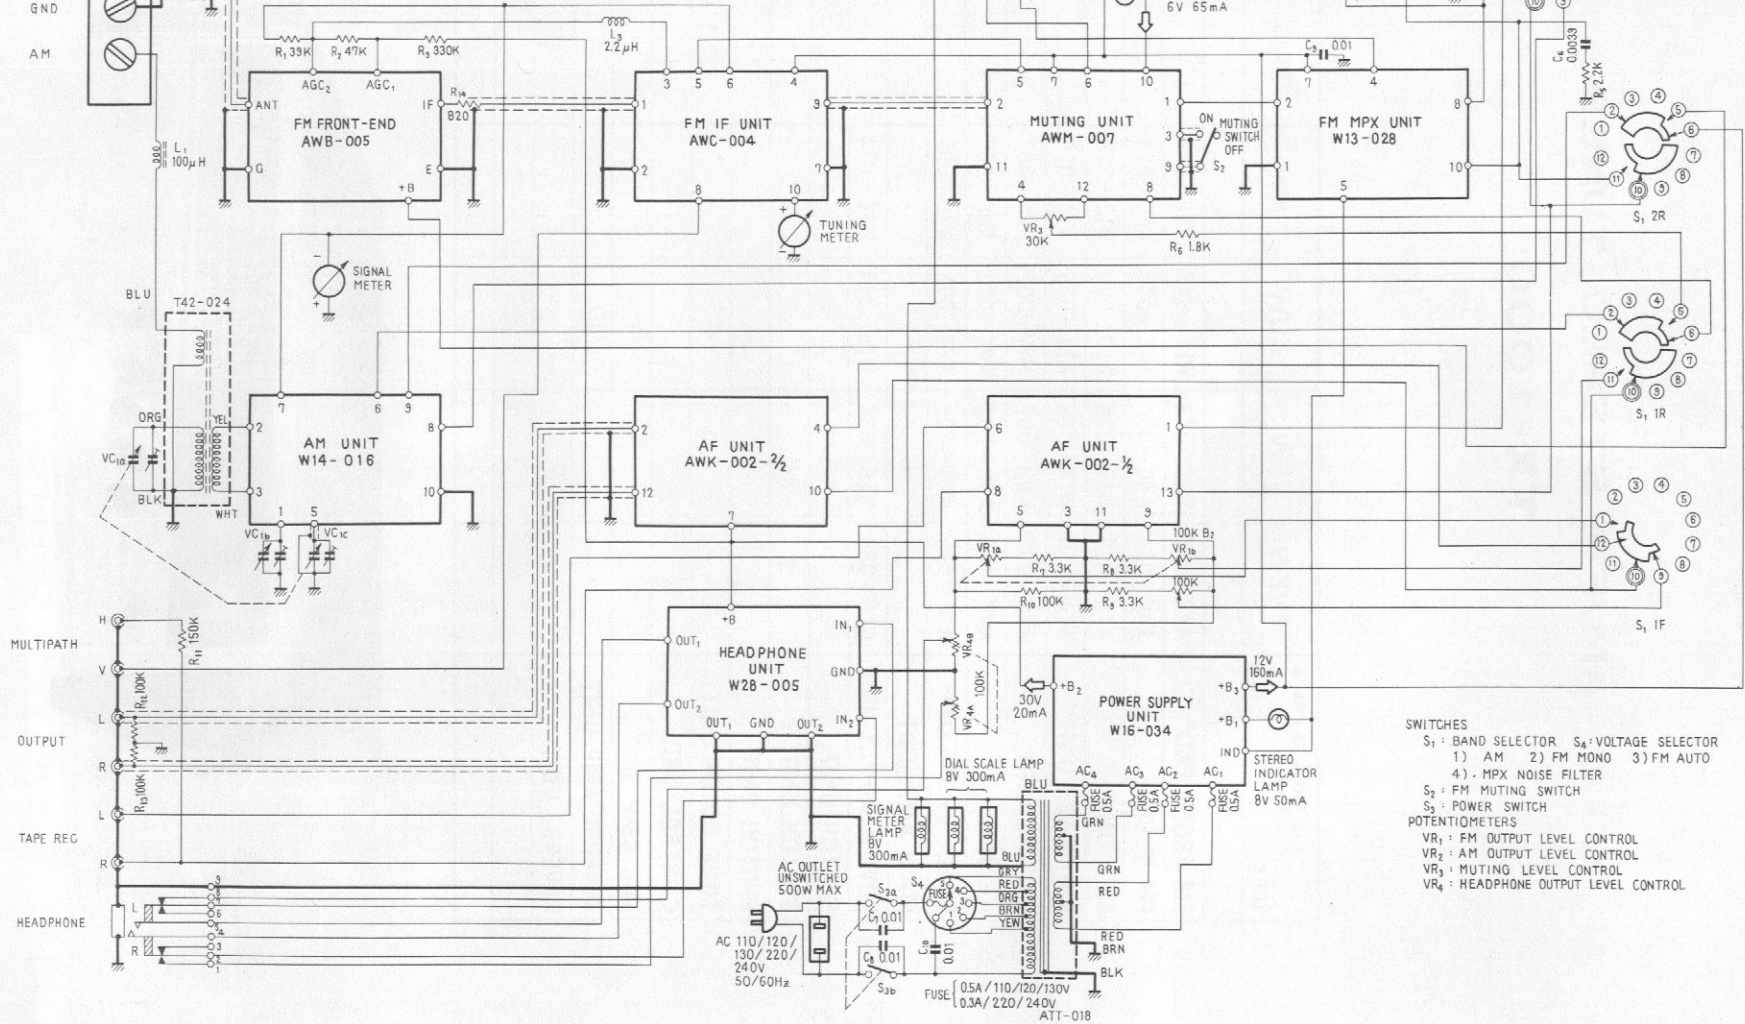

- SWITCHES**
 S₁ : BAND SELECTOR S₄ : VOLTAGE SELECTOR
 1) AM 2) FM MONO 3) FM AUTO
 4) . MPX NOISE FILTER
 S₂ : FM MUTING SWITCH
 S₃ : POWER SWITCH
- POTENTIOMETERS**
 VR₁ : FM OUTPUT LEVEL CONTROL
 VR₂ : AM OUTPUT LEVEL CONTROL
 VR₃ : MUTING LEVEL CONTROL
 VR₄ : HEADPHONE OUTPUT LEVEL CONTROL

AC 110/120/130/220/240V
 50/60Hz
 AC OUTLET UNSWITCHED 500W MAX
 FUSE [0.5A/110/120/130V
 0.3A/220/240V
 ATT-018

TX-1000

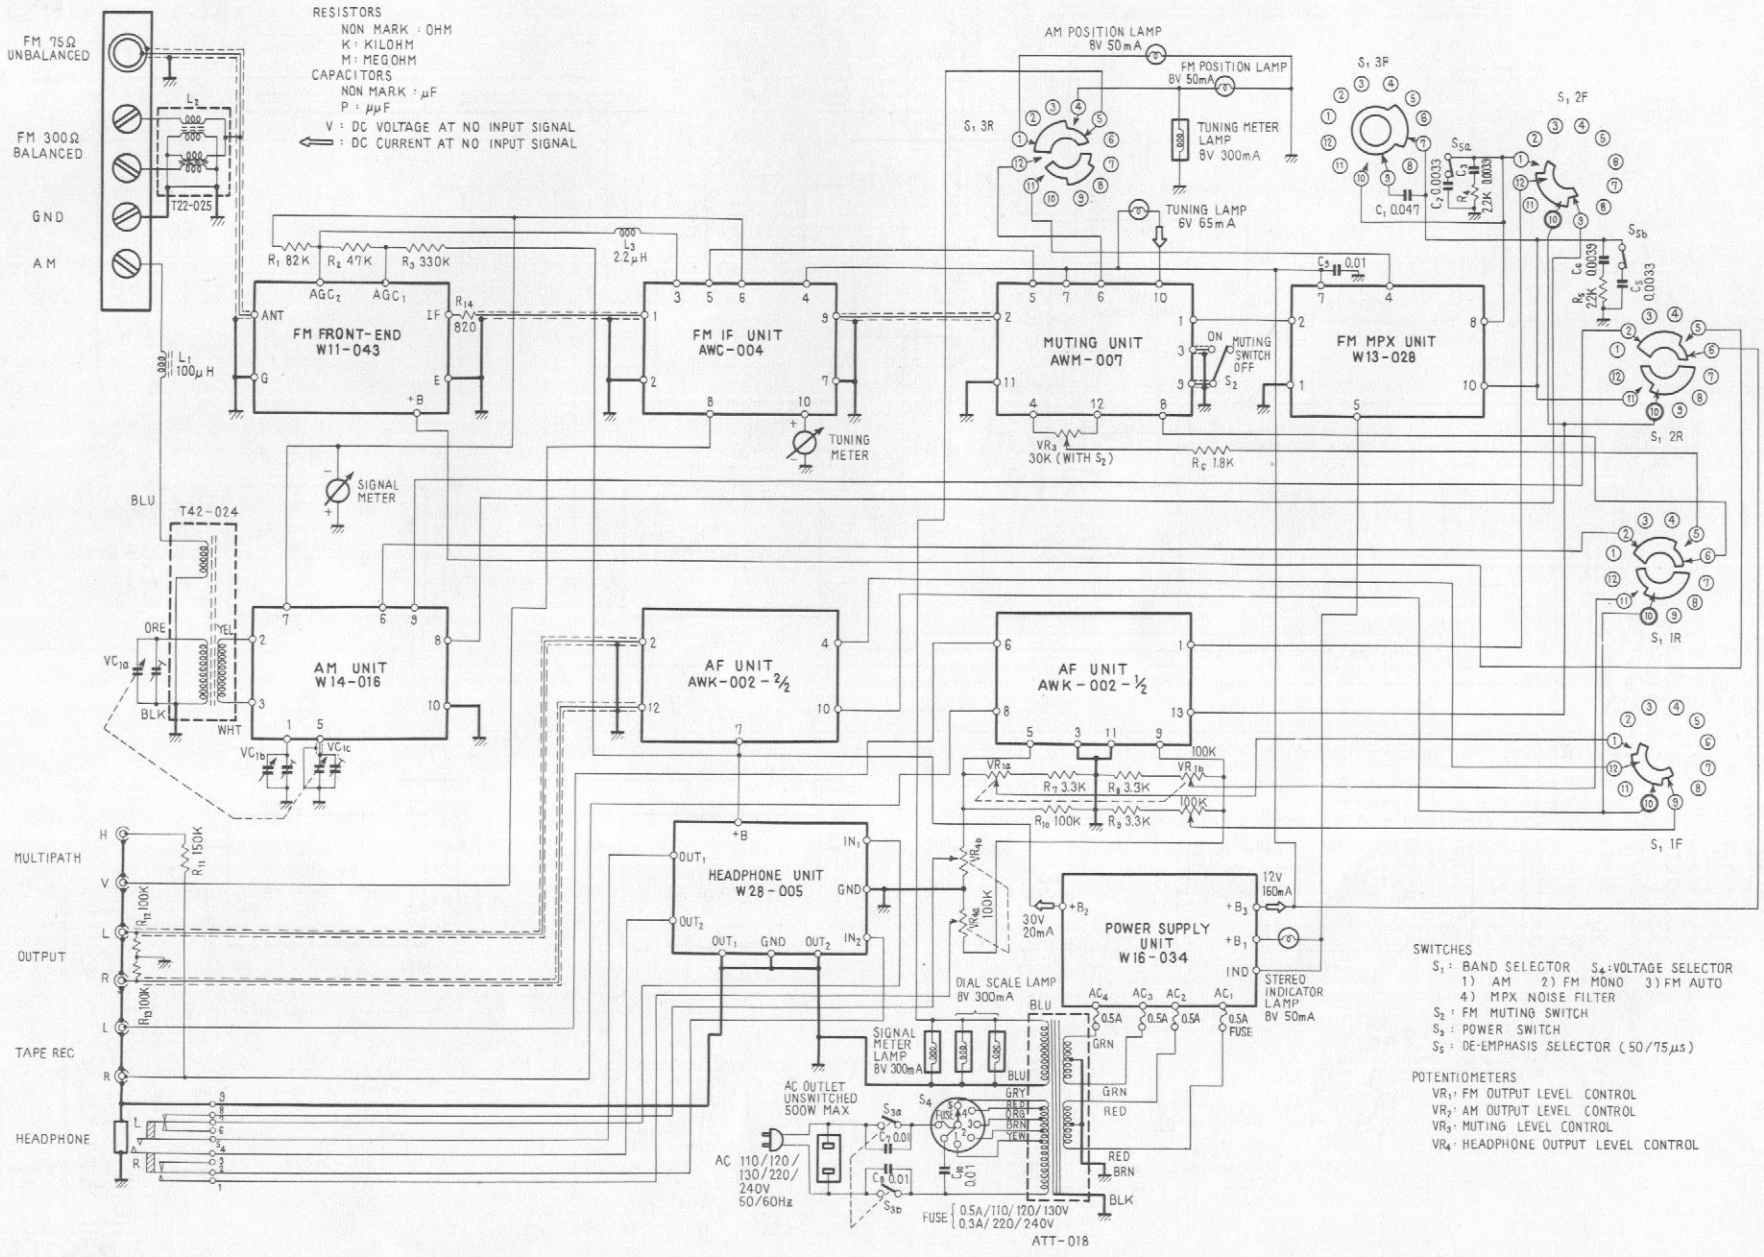

- SWITCHES**
 S₁ : BAND SELECTOR S₄ : VOLTAGE SELECTOR
 1) AM 2) FM MONO 3) FM AUTO
 4) MPX NOISE FILTER
 S₂ : FM MUTING SWITCH
 S₃ : POWER SWITCH
 S₅ : DE-EMPHASIS SELECTOR (50/75 μs)
- POTENTIOMETERS**
 VR₁ : FM OUTPUT LEVEL CONTROL
 VR₂ : AM OUTPUT LEVEL CONTROL
 VR₃ : MUTING LEVEL CONTROL
 VR₄ : HEADPHONE OUTPUT LEVEL CONTROL

TX-1000 for FW model

TX-1000

TX-1000

FM 15Ω
UNBALANCED

FM 300Ω
BALANCED

GND

AM

RESISTORS

NON MARK : OHM
K : KILOHM
M : MEGOHM

CAPACITORS
NON MARK : μF
P : μμF

V : DC VOLTAGE AT NO INPUT SIGNAL
← : DC CURRENT AT NO INPUT SIGNAL


SWITCHES

S₁ : BAND SELECTOR
1) AM 2) FM MONO 3) FM AUTO
4) MPX NOISE FILTER

S₂ : FM MUTING SWITCH
S₃ : POWER SWITCH

POTENTIOMETERS

VR₁ : FM OUTPUT LEVEL CONTROL
VR₂ : AM OUTPUT LEVEL CONTROL
VR₃ : MUTING LEVEL CONTROL
VR₄ : HEADPHONE OUTPUT LEVEL CONTROL

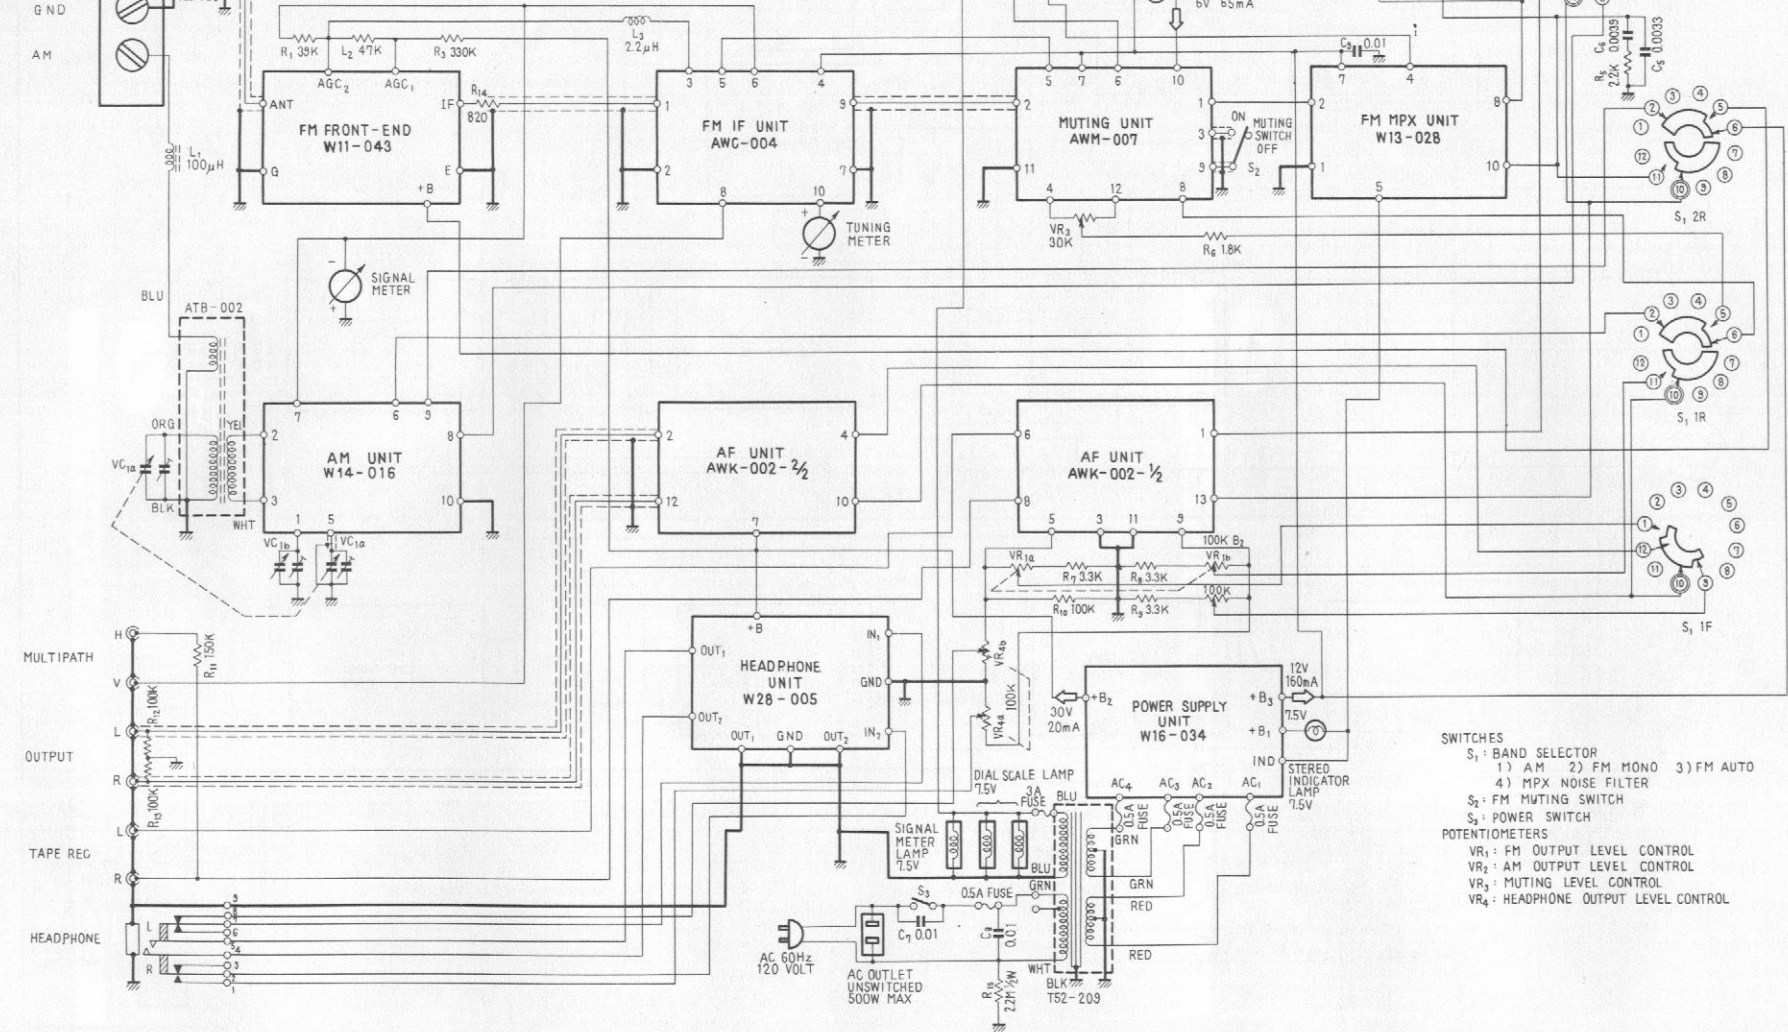

SWITCHES

S₁ : BAND SELECTOR
1) AM 2) FM MONO 3) FM AUTO
4) MPX NOISE FILTER


S₂ : FM MUTING SWITCH
S₃ : POWER SWITCH

POTENTIOMETERS

VR₁ : FM OUTPUT LEVEL CONTROL
VR₂ : AM OUTPUT LEVEL CONTROL
VR₃ : MUTING LEVEL CONTROL
VR₄ : HEADPHONE OUTPUT LEVEL CONTROL



FM FRONT END

FM FRONT END
 W11-043
 AWB-005
 FTZ approved

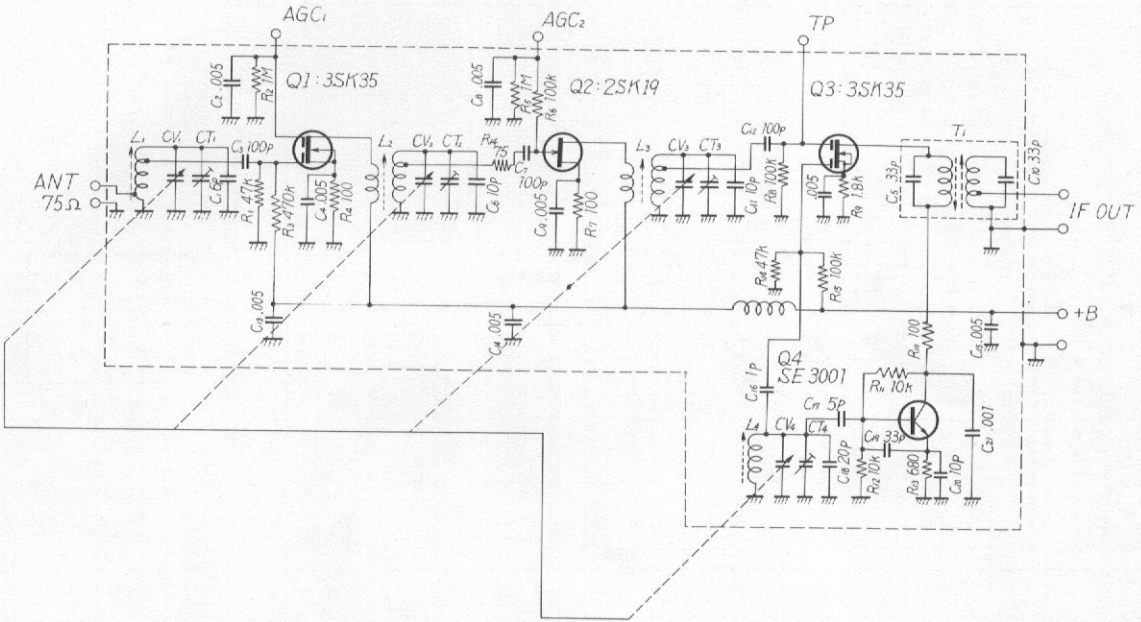

FM IF UNIT


FM IF UNIT
 AWC-004

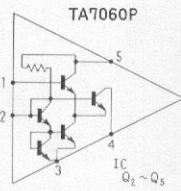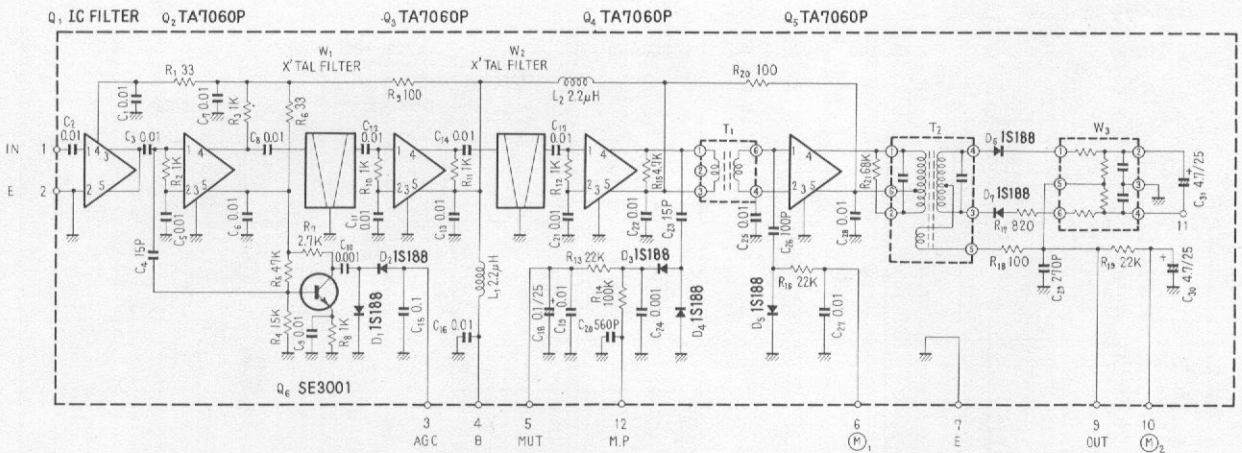

MPX UNIT

MPX UNIT


W13-028

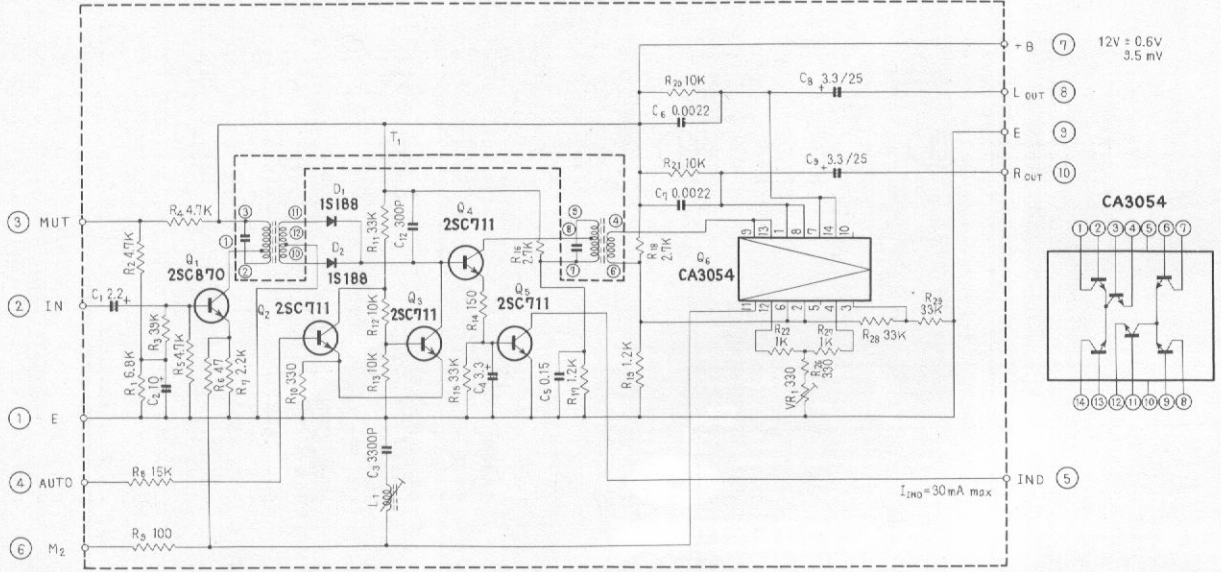

AM TUNER UNIT


AM TUNER UNIT

W14-016

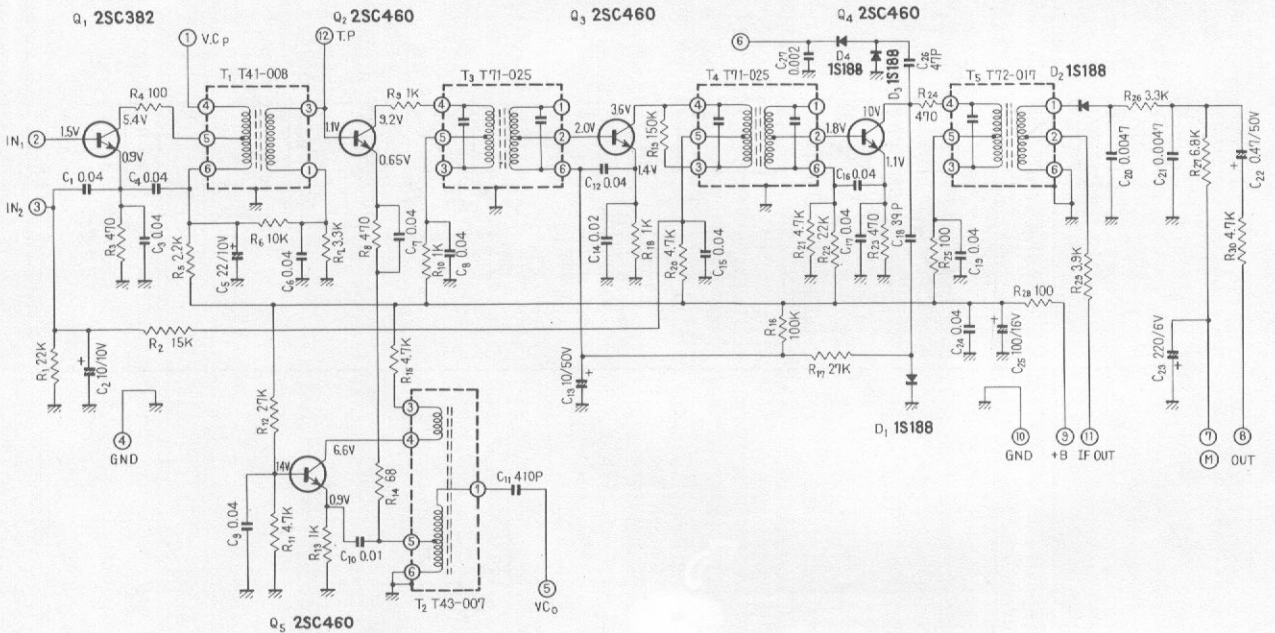


MUTING UNIT

MUTING UNIT
AWM - 007

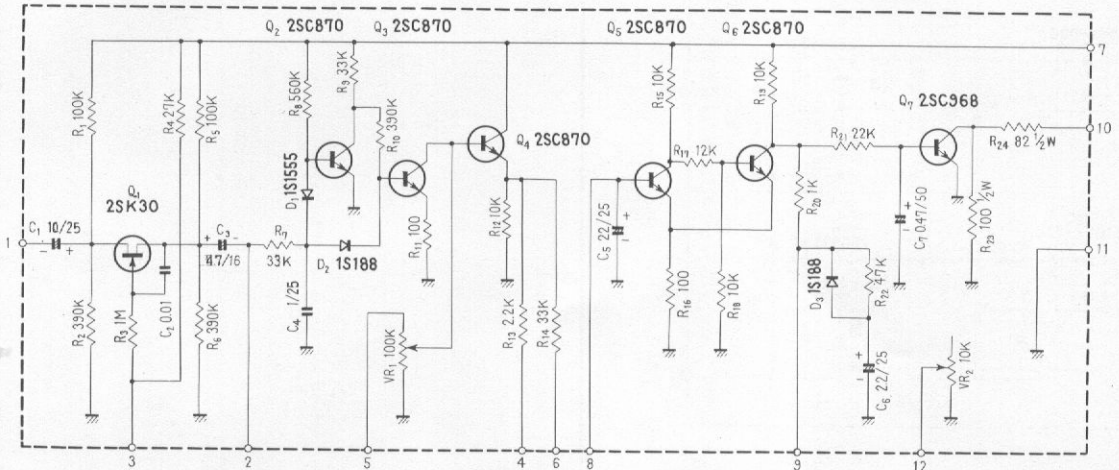


AF UNIT

AF UNIT
AWK-002

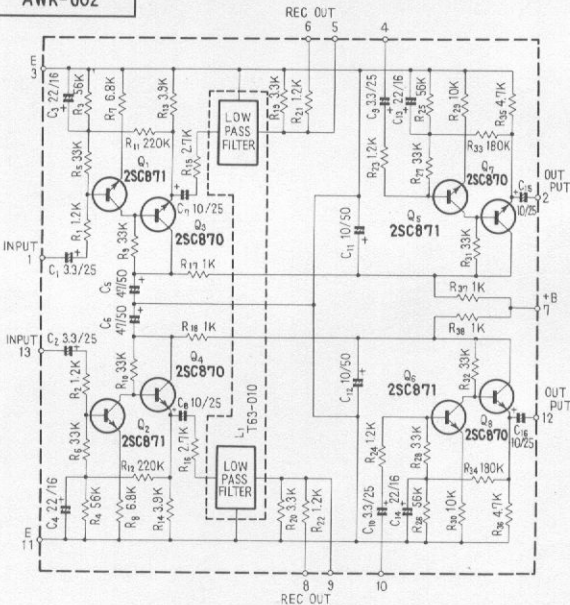

HEADPHONE UNIT

HEADPHONE AMP UNIT
W28-005

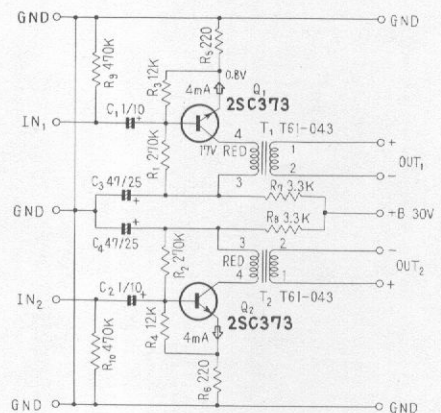

POWER SUPPLY UNIT

POWER SUPPLY UNIT

W16-034

