



NOTES
 □ : SIGNAL VOLTAGE AT 1KHz
 ▼ : DC VOLTAGE AT NO INPUT SIGNAL
 ← : DC CURRENT AT NO INPUT SIGNAL

POTENTIOMETER
 VR₁ : PHONO 2/MIC LEVEL
 VR₂ : VOLUME
 VR₃ : BALANCE

SWITCHES
 S₁ : FUNCTION SELECTOR
 (1) PHONO 2/MIC (2) PHONO1 (3) TUNER (4) AUX 1 (5) AUX 2
 S₂ : TAPE DUPLICATE
 (1) OFF (2) ON
 S₃ : TAPE MONITOR
 (1) 1 (2) SOURCE (3) 2
 S₄ : PHONO 2 IMPEDANCE
 (1) 35KΩ (2) 50KΩ (3) 70KΩ (4) 100KΩ

S₅ : MODE SELECTOR
 (1) REV (2) STEREO (3) L+R (4) L (5) R
 S₆ : ATTENUATOR
 (1) 0dB (2) -15dB (3) -30dB
 S₇ : LOW FILTER
 (1) 15Hz (2) OFF (3) 30Hz
 S₈ : HIGH FILTER
 (1) 12KHz (2) OFF (3) 8KHz
 S₉ : TONE
 (1) OFF (2) ON
 S₁₀ : BASS TURN OVER
 (1) 100Hz (2) 200Hz (3) 400Hz
 S₁₁ : BASS CONTROL
 S₁₂ : TREBLE CONTROL
 S₁₃ : TREBLE TURN OVER
 (1) 2KHz (2) 4KHz (3) 8KHz
 S₁₄ : PRE/POWER AMP.
 (1) NORMAL (2) SEPARATED
 S₁₅ : SPEAKER SELECTOR
 (1) OFF (2) A (3) B (4) A+B
 S₁₆ : RELAY
 S₁₇ : POWER
 (1) OFF (2) ON

AC 220V
 50/60Hz