

Sansui Circuit Boards

Notes:

1. Although many of the board numbers listed here are repeated between models in the same amplifier/receiver series, they are not necessarily interchangeable between models. Sansui frequently re-used board numbers but made undocumented or non-obvious changes between component loading and/or values. Before using a board in a different model than originally loaded, take care to check for compatibility.
2. All board descriptions have had the words "Block" or "Circuit Board" removed from the original Sansui description.
3. This effort to update the documentation of Sansui circuit board numbers should be treated as a well intentioned but fallible resource. Please consider contributing corrections.
4. It should be obvious, this document is by no means exhaustively complete, it would be helpful to contribute any missing information when you have it available.

The general format for organizing the board numbers is below. Columns were added for each model in a given series.

Series	Model 1 Year Introduced	Model 2 Year Introduced	Model 3 Year Introduced	Model 4 Year Introduced
Board Description (board # all different)	F-xxxx	F-yyyy	F-zzzz	
Board Func. 2 (same board # used)	F-xxxx	F-xxxx		F-xxxx
Board Func. 3 (board # variation used)	F-xxxx	F-xxxxA		
Board Func. 4 (multiple board # used)	F-xxxx	F-xxxx	F-yyyy	F-yyyy
Board Func. 5 (Multiple board # variations used)	F-xxxxB	F-xxxx	F-yyyyA	F-yyyy
Notable board number usage variations				

Integrated Amplifiers

x00 Series	100
Connector	F-2597

AU-x0x Series	AU-101
Main Amp	F-1302
Equalizer/Tone Control	F-1303

Sansui_Circuit_Boards

AU-xxx Series	AU-222	AU-555	AU-555A	AU-666	AU-777	AU-777A	AU-888	AU-999
	1968	1968	1970	1970	1967	1969	1970	1970
Head Amp	F-1064							
Main Amp	F-1082		F-1266					
Control AMP	F-1083	F-1060						
Head Amp		F-1064						F-1228-1
Equalizer			F-1267					
Tone Control			F-1272					F-1209
Driver								F-1159
Filter								F-1208
Ripple Filter								F-1230
Plus Ripple								F-1231
Minus Ripple								F-1277
SP Protector								F-1334

AU-x500 Series	AU-6500	AU-7500	AU-8500	AU-9500
	1972	1972	1973	1972
Protector (2)	F-1215A	F-1215A		
Power Supply	F-2013-1A	F-2013-1		
Equalizer	F-2028-A	F-2028	F-2006A	F-2006A
Driver	F-2034-A	F-2034	F-2029B	F-2029
Accessory	F-2036			
Protector (1)	F-2041	F-2041		
Tone Control	F-2045	F-2014	F-2019C	F-2019
Switch		F-2023	F-2049A	F-2021
Loudness		F-2042		
Filter			F-2016C	F-2016
Level Adjuster			F-2017	F-2017A
Tone Switch			F-2020	F-2020
Power Supply & Protector			F-2030-1	F-2030
Choke Transformer			F-2037-1	F-2037
Power Transistor Socket			F-2050A	F-2050
Rectifier			F-2076	

Sansui_Circuit_Boards

AU-xx00 Series	AU-2200	AU-4400	AU-5500	AU-6600	AU-7700
	1974	1974	1974	1974	1974
Main & Power Supply	F-2200				
Equalizer, Tone Control	F-2400				
Selector Switch	F-2406				
Volume	F-2407		F-2099	F-2099	F-2093
Accessory	F-2408				
Equalizer & Power Supply			F-2091	F-2092A	F-2092
Driver & Power Supply			F-2097B	F-2097A	F-2097
Accessory Switch			F-2098	F-2413	F-2096
Tone Control			F-2414	F-2412	F-2095
Accessory Switch (2nd)			F-2415	F-2098	F-2094

AU-x900 Series	AU-2900	AU-3900	AU-4900	AU-5900	AU-6900	AU-7900
	1976	1975	1975	1975	1975	1975
Power Amplifier				F-2596	F-2596	F-2596
Earth				F-2598	F-2598	F-2598
Equalizer				F-2599	F-2599	F-2599
Switching (Pre and Main Amp)				F-2600	F-2600	F-2600
Switching (Pick-up Load)				F-2601	F-2601	F-2601
Lever Switch				F-2602	F-2602	F-2609
Volume & Balance Control				F-2603	F-2603	F-2608
Tone Control				F-2604	F-2606	F-2610
Filter				F-2605	F-2607	F-2611

Sansui_Circuit_Boards

Professional Series	AU-9900	AU-9900A	AU-11000	AU-11000A	AU-20000
	1975	1977	1975	1977	
Power Supply	F-2566	F-2629	F-2566	F-2629	
Power Supply for Driver Amp	F-2567	F-2630	F-2567	F-2630	
Regulated Power Supply & Protector	F-2568		F-2568		
Input Terminal & Switch	F-2569	F-2569	F-2569	F-2569	
Equalizer	F-2570	F-2691	F-2570	F-2691	F-2501
Tape Copy & Tuner Switch	F-2571	F-2571	F-2571	F-2571	
Tape Play	F-2572	F-2572	F-2572	F-2572	
Filter & Accessory	F-2573	F-2573	F-2573	F-2573	
Buffer Amp	F-2574		F-2574		
Tone – Midrange	F-2575	F-2575	F-2575	F-2575	
Tone – Bass & Treble	F-2576	F-2576	F-2576	F-2576	
Tone Selector (Treble)	F-2577	F-2577	F-2577	F-2577	
Tone Selector (Bass)	F-2578	F-2578	F-2578	F-2578	
Pre-Main Switch	F-2579	F-2579	F-2579	F-2579	
Driver Amp	F-2580		F-2580		
Power Amp (+ & -)	F-2581		F-2581		
Final Stage (+ & -)		F-2581		F-2581	
Power Supply for Driver Amp (2 nd)	F-2582		F-2582		
Driver Amp (2 nd)	F-2583		F-2583		
Level Volume		F-2660			
Driver		F-2661			F-2507
Meter Lamp					F-2484
Tone Control					F-2488
Tone Amp					F-2495
Meter					F-2496
Emitter Resistor					F-2497
Filter Amp					F-2498
Input					F-2500
Main Volume					F-2502
Tape Copy					F-2503
Filter					F-2504
Flat Amp					F-2505
Regulated Power Supply					F-2508
Connector					F-2510
Protector					F-2511
Connector (2 nd) (parts list F-1512, schematic F-2512?)					F-2512
Meter Driver Board (2008 list, not in SM ?)					F-2515

Sansui_Circuit_Boards

AU-x17 Series	AU-117	AU-117ii	AU-217	AU-217ii	AU-317	AU-317ii
	1977	1979	1977	1979	1977	1979
Tone Control & Driver	F-2728	F-2728				
Equalizer	F-2727	F-2727		F-2758	F-2751	F-2751
Power Amplifier				F-2760	F-2754	F-2754
Tone Control				F-2759	F-2752	F-2752
Input Terminal	F-2726	F-2726		F-2757	F-2750	F-2750
Output Connection				F-2755	F-2768	F-2768
Voltage Selector	F-2731	F-2731		F-2731	F-2731	F-2731
Mic AMP					F-2756	F-2756
High Filter	F-2729	F-2729				
Filter					F-2753	F-2753
Pre-Main Connection					F-2732	

AU-x17 Series	AU-417	AU-517	AU-717
	1977	1977	1977
Control Amp	F-2673 *		
Tone Control	F-2674 *	F-2673 *	F-2720
Bass & Treble Volume		F-2674 *	F-2665
Driver L-CH	F-2721	F-2721	F-2721
Driver R-CH	F-2722	F-2722	F-2722
Equalizer	F-2723	F-2723	F-2723
Input Terminal	F-2911	F-2669	F-2669
Tape Play	F-2921	F-2667	F-2667
Power Supply & Protector	F-3043	F-2675	F-2663
Pre-Main Switch		F-2670	F-2670
Turn Over Switch			F-2666
* Note: Naming changes between same PCBs in AU-417 and AU-517			

AU-x19 Series	AU-519	AU-719	AU-819	AU-919
	1979	1979	1979	1978
Equalizer	F-2910			
Pre-Main Terminal	F-2912			
Tone Control Amp	F-2913			
Tone Control	F-2914	F-3098	F-2842	F-2842
Power Supply & Protector	F-2915	F-3101		
Tape Play Switch	F-2921			
Driver (L-CH)	F-2926	F-2926		
Driver (R-CH)	F-2927	F-2927		
Input Terminal	F-2989		F-2834	F-2834
Input		F-3094		
Head Amp		F-3095		
Tape Copy		F-3096		
Tone		F-3099		
Turn Over		F-3100	F-2843	F-2843
Power Supply for Power Amplifier Section			F-2830	F-2845
Power Supply for Pre-Amp Section			F-2831	F-2844
Loudness, Jump, Tone Defeat			F-2832	
Equalizer Amp			F-2835	F-2835
Tape Playback			F-2836	F-2836
Tape Copy Switch			F-2837	F-2837
Driver Amp			F-2839	F-2839
Protector			F-2840	F-2840
Flat Amp			F-2841	F-2841
Rectifier			F-2928	F-2928
MC Head Amp			F-2995	F-2833
Connection			F-2996	
Circuit Board between Pre & Main amp				F-2838
Muting, Jump, Tone Defeat				F-2846

Fourth Generation	AU-X1
	1978
Circuit Board	F-2769
Equalizer AMP L-CH	F-2770
Equalizer AMP R-CH	F-2771
MC, MM Mother	F-2772
Muting	F-2773
Buffer AMP	F-2774
Driver AMP	F-2775
Selector Switch	F-2776
MC, MM Switch	F-2777
Regulated Power Supply	F-2778
Circuit Board	F-2779
Circuit Board	F-2780
Power Supply & Protector	F-2781
Flat AMP	F-2819
Speakers Relay	F-2820
MC Head AMP L-CH	F-2917
MC Head AMP R-CH	F-2918

Sansui_Circuit_Boards

Fifth Generation	AU-D607X	AU-D607X Decade	AU-D707X	AU-D707X Decade	AU-D907X	AU-D907X Decade	AU-D11 II	AU-D77X	AU-G90X	AU-G99X
	1984		1984		1984		1983	1983	1984	1984
Driver Amplifier L	F-4264	F-4264	F-4266	F-4266	F-4266	F-4266	F-4266	F-4264	F-4726	F-4726
Driver Amplifier R	F-4265	F-4265	F-4267	F-4267	F-4267	F-4267	F-4267	F-4265	F-4727	F-4727
Protector L	F-4268	F-4268	F-4268	F-4268	F-4268	F-4268	F-4268	F-4268	F-4268	F-4268
Protector R	F-4269	F-4269	F-4269	F-4269	F-4269	F-4269	F-4269	F-4269	F-4269	F-4269
Main Amplifier	F-4295		F-4296	F-4296	F-4296	F-4296	F-4296	F-4295	F-4296	F-4296
Main PS Filter	F-4300		F-4291	F-4291	F-4291	F-4291	F-4291	F-4293	F-4291	F-4639
Control Tone	F-4403		F-4510	F-4510	F-4398	F-4398	F-4273		F-4510	
Volume Pot.	F-4404		F-4511	F-4511	F-4399	F-4399	F-4274	F-4282	F-4511	F-4635
Headphone Socket	F-4405		F-4512	F-4512	F-4400	F-4400	F-4276		F-4512	F-4637
Input Lamps	F-4406		F-4514	F-4514	F-4402	F-4402	F-4275		F-4514	F-4633
LEDs	F-4407		F-4513	F-4513	F-4401	F-4401	F-4297		F-4513	
Equalizer	F-4505		F-4505	F-4505	F-4298	F-4298	F-4263	F-3725	F-4505	
Switch	F-4506		F-4509	F-4509	F-4302	F-4302			F-4509	F-4632
Equalizer Inputs	F-4507		F-4508	F-4508	F-4301	F-4301	F-4271	F-4277	F-4508	
Speaker Terminals, relay, protection	F-4553		F-4553	F-4553	F-4553	F-4553	F-4287	F-4287	F-4553	F-4553
Preamplifier Power Sup.			F-4292	F-4292	F-4299	F-4299	F-4292		F-4292	F-4640
Speakers Selector SW			F-4554	F-4554	F-4554	F-4554	F-4288	F-4288	F-4554	F-4554
Protection LED			F-4555				F-4289 *	F-4286	F-4555	F-4642
CD Direct Input					F-4303	F-4303				
MM/MC Input							F-4270			F-4641
Power LED								F-4289 *		
Equalizer Amp										F-4630
Control Amp										F-4629
Loudness Muting, Filter, Balance										F-4723
Power Supply										F-4636
Inputs and Selector SW										F-4631

* Note: F-4289 PCB used in 2 models for different LEDs

Pre & Power Amplifiers

	B-2101
Drive AMP	F-4618
Power AMP	F-4619
Protector	F-4620
Peak Power Display	F-4622
Speaker Switch	F-4623
Control	F-4624
Input Terminal	F-4625
Power Supply	F-4626
Power Supply	F-4627
AC Fuse	F-4628
Power Indicator	F-4731

	BA-1000	BA-2000	BA-3000	BA-5000
	1975	1976	1975	1975
Input Terminal Board		F-2506		
Meter Amp		F-2514		
		F-2581		
Power Supply		F-2629		F-2519
Power Supply Board for Drivers		F-2630		
Level-Volume and Meter		F-2631		
Driver Board		F-2661	F-2507	F-2518
			F-2508	
Protection Board			F-2511	
			F-2512	
Subsonic Filter Board			F-2513	
Meter Amplifier			F-2515	F-2515
Input Terminal				F-2506
Meter Lamp				F-2514
Connector (2nd)				F-2516
Connector (1st)				F-2517
Buffer Amplifier				F-2520
Power Supply (Low Voltage)				F-2521

	C-2101
Equalizer AMP and Flat AMP	F-4606
Input Selector	F-4610
Selector Control	F-4611
Master Volume	F-4612
REC Selector	F-4613
LED	F-4614
Phones Jack	F-4615
Rec Selector Indicator	F-4616
Power Indicator	F-4617

Receivers

	350	350A
	1968	1970
AM-FM Tuner Unit	F-1048A	
Main Amp Unit	F-1061	
Equalizer Pre-Amp Unit	F-1079	
FM Multiplex & Indicator	F-1099	
Power Unit	F-11132	
FM MPX		F-1239-1D
AM, FM IF		F-1247-1B
Tone Control		F-1248
Head Amp		F-1249
Driver		F-1250
Power		F-1324

Single Digit Series	Six	Seven	Eight	Eight Deluxe
	1972	1972	1970	
Lamp Holder	F-1205	F-1205	F-1205	
FM MPX	F-1387B	F-1387B	F-1261A	F-1261C
AM IF	F-1416A	F-1417C	F-1238	F-1417D
Equalizer (Head Amp)	F-1435	F-1435	F-1216	F-1472
Tone Control	F-1436A	F-1436		
Accessory (A)	F-1437	F-1437		
Accessory (B)	F-1438	F-1438		
Driver	F-1439	F-1439	F-1278	F-1474
Protector	F-1440	F-1440	F-1334	F-1475
Power Supply	F-1441	F-1441	F-1201	F-1201A
FM IF	F-1450	F-1450A	F-1103B	F-1419A
Accessory Switch			F-1182	F-1476
Accessory Switch (2 nd)			F-1202	F-1477
Tone Control & AM Audio Amp			F-1235	F-1473

Sansui_Circuit_Boards

x000 Series	2000	2000A	2000X	3000	3000A	4000	5000	5000A	5000X
	1967	1969	1971	1967	1967	1969	1968	1969	1971
Driver Amp	F-1001C	F-1180	F-1180	TRD-6B		F-1150	F-1040	F-1040	F-6013
FM Tuner	F-1011			FAMT-102U			F-1011	F-1085	
FM MPX	F-1013			TRX-6					F-1006-2
FM, AM IFT	F-1014								
Protector	F-1015			TRW-3A		F-1176	F-1041	F-1041	
Control Amp	F-1016A			TRM-3A					
Ripple Filter	F-1018A	F-1195	F-1195-1	TRR-1		F-1187	F-1137	F-1137	F-1137A-1
Diodes Stack	F-1021A			DS-1A			F-1042	F-1042	F-1042-1
Equalizer Amp	F-1037	F-1253	F-1253	TRHA-6A		F-1169	F-1036	F-1036	F-1036A
Accessory Circuit	S-001B	F-1254	F-1254,1			F-1178	F-1056	F-1056	F-1056-5
High-Low Filter	S-002A	F-1223	F-1223			F-1186	F-1051	F-1051	
FM Stereo Indicator	TRI-1A			TRI-1A					
AM IF		F-10381	F-10381			F-10382	F-1038	F-1038	F-1038-5
Multiplex		F-1190	F-1190			F-1185	F-1006	F-1006A	
Rectifier		F-1197	F-1197						
FM IF		F-1214	F-1214-1			F-1214	F-1005	F-1005	F-1219
AM Meter		F-1220	F-1220-1						
Tone Control		F-1222	F-1222-1			F-1149	F-1029	F-1029	
Noise Canceler and Muting		F-1224	F-1224						
FM-IFT				FIF-202U					
AM Tuner				TRAM-3					
Pre-Power				TRZ-2C					
Muting						F-1155	F-1120	F-1120	
Tape Monitor SW							F-1052	F-1052	F-1052-2
Tone, Mic									F-1350-3
Filter									F-6016

Sansui_Circuit_Boards

x0x0 Series	5050	6060	7070	8080	9090
	1976	1976	1976	1975	1975
Tuner	F-2590	F-2590	F-2614		
Equalizer & Mic	F-2644	F-2644	F-2620		
Muting	F-2645	F-2645	F-2615		
Tone Control	F-2646	F-2646	F-2622		
Driver	F-2647	F-2647	F-2624		
Power Supply	F-2648	F-2648	F-2626		
Capacitor	F-2650	F-2650			
Illumination	F-2651	F-2651	F-2627		
Filter		F-2649	F-2623		
Accessory Switch			F-2621		
Power Supply (Mother Board)			F-2625		
Lamp				F-1470	F-1470
FM Pack				F-1519	F-1519
Power Supply (2nd)				F-2431	F-2431
Driver				F-2436	F-2436
Equalizer Circuit Board				F-2541	F-2541
Accessory Switch				F-2542	F-2542
Tone Control				F-2543	F-2543
Tone Control (2nd)				F-2544	F-2544
Filter & Muting				F-2545	F-2545
Power Supply				F-2546	F-2546
Protector				F-2547	F-2547
Protector Connector				F-2548	F-2548
FM, AM Tuner				F-2549	F-2549
Multi-Path				F-2550	F-2550
Connector				F-2597	F-2597

*Same # as 8080DB/9090DB

*Same # as 8080DB/9090DB

*Same # as 8080DB/9090DB

x0x0DB Series	8080DB	9090DB
	1975	1976
FM Pack	F-1519	F-1519
Tone Control	F-2544	F-2544
FM, AM Tuner	F-2549	F-2549
Mic AMP	F-2617	F-2617
Power Supply RF	F-2619	F-2619
Filter	F-2623	F-2623
Driver	F-2624	F-2624
Illumination	F-2627	F-2627
Equalizer	F-2653	F-2653
Push Switch	F-2654	F-2654
Dolby NR	F-2655	F-2655
Power Supply	F-2656	F-2656
Power Relay	F-2657	F-2657
Connector (A)	F-2682	F-2682
Connector (B)	F-2683	F-2683
Connector (C)	F-2684	F-2684
DIN Terminal	F-2690	F-2690
Connector	F-2692	F-2692
Push Switch	F-2693	F-2693
Dolby Volume	F-2694	F-2694
LED Ass'y	F-2695	F-2695

*Same # as 8080/9090

*Same # as 8080/9090

*Same # as 8080/9090

Sansui_Circuit_Boards

G-x000 Series	G-2000	G-3000	G-5000	G-6000	G-7000	G-8000	G-9000	G-22000	G-33000
	1977	1977	1978	1978	1978	1978	1978	1978	1978
Tuner			F-2590			F-2919	F-2920		
Audio Muting & Loudness Switch			F-2854						
Driver AMP			F-2856			F-2806	F-2806		
Power Supply			F-2858						
FM Stereo Indicator			F-2862 *						
Power Indicator			F-2862 *						
Signal Meter			F-2862 *						
Tone Control			F-2863			F-2799	F-2799		
Audio Muting & Loudness Switch (2 nd)			F-2864						
Equalizer			F-2865						
Tape Monitor			F-2866						
Tone & Subsonic Filter Switch			F-2867						
Speaker Selector			F-2868						
Balance Volume			F-2878						
Volume			F-2879			F-2800	F-2800		
Mic AMP			F-2916			F-2795	F-2795		
Front-End Pack						F-2714	F-2714		
Input Terminal						F-2794	F-2794		
FM Accessory SW						F-2797	F-2797		
Equalizer Amp						F-2798	F-2796		
Tone SW						F-2802	F-2801		
Power Supply (R)						F-2807	F-2807		
Power Supply (L)						F-2808	F-2808		
AF Power Supply and Protector						F-2809	F-2809		
RF Power Supply						F-2810	F-2810		
Indicator						F-2811	F-2811		
Selector Indicator						F-2812	F-2812		
Driver Connection						F-2814	F-2814		

* Note: F-2862 PCB used for 3 different lighting functions

G-x500 Series	G-3500	G-4500	G-5500	G-7500
	1978	1978	1978	1978
Signal Meter	F-2708	F-2708		
Tuning Meter	F-2709	F-2709		
Stereo Indicator	F-2710	F-2710		
Pre/Main & Power Supply	F-2711	F-2711		
Loudness	F-2712	F-2712		
Microphone Amp	F-2713	F-2713		
Voltage Selector	F-2716	F-2716		
AM/FM Tuner & FM MPX	F-2924	F-2924		
Tuner			F-2590	
Audio Muting & Loudness Switch			F-2854	
Power Indicator			F-2862	
FM Stereo Indicator			F-2862	
Tone Control			F-2863	
Input Terminal			F-2864	
Equalizer			F-2865	
Tape Monitor/FM Muting & Mode Switch			F-2866	
Tone & Subsonic Filter Switch			F-2867	
Speakers Selector			F-2868	
Balance Volume			F-2878	
Volume			F-2879	
Mic Amp			F-2916	
Power Amplifier			F-2980	
Power Transistor (L-Ch)			F-2981	
Power Transistor (R-Ch)			F-2981	

Sansui_Circuit_Boards

G-x700 Series	G-4700	G-5700	G-6700	G-7700	G-8700DB	G-9700
	1979	1979	1979	1979	1979	1979
AM/FM Tuner & FM MPX	F-3062					
Main Amp & Power Supply	F-3066					
Digital Display	F-3000					
Pre Scaler	F-3010					
Stereo & Quartz Lock Indicator	F-3063					
Balance Volume	F-3065					
Voltage Selector	F-2716					
Input Terminal	F-3064					
Voltage Regulator	F-3091					
Power Indicator	F-3092					

Quadrophonic Receivers

QRX-xxx Series	QRX-777
CD-4 Sub-channel	F-2475

Sansui_Circuit_Boards

QRX-x001 Series	QRX-5001	QRX-6001	QRX-7001	QRX-8001	QRX-9001
Protection			F-1461		
FM Tuner			F-1507		
FM Pack			F-1519		
CD-4 Main			F-2086		
QS Matrix			F-2087	F-2087	F-2087
QS Phase Discriminator Section			F-2088	F-2088	F-2088
CD-4 Sub-channel			F-2090		
Filter & Switch			F-2423		
Tone Control			F-2425	F-2637	F-2637
Power			F-2427		
Filter & Power Supply			F-2428		
Power Supply			F-2431	F-2638	F-2638
Driver			F-2436	F-2624	F-2624
Equalizer			F-2458		
Equalizer & CD-4				F-2589	F-2589
Tuner				F-2590	F-2614
Selector				F-2632	
4-ch Function Switch & REC CAL Tone				F-2634	F-2634
4-ch Function Switch & REC CAL Tone Sub				F-2635	F-2635
Volume & Filter				F-2636	F-2636
Pre-Power Supply				F-2639	F-2639
Illumination (1)				F-2640	F-2640
Illumination (2)				F-2641	F-2641
Indicator				F-2642	F-2642
4-ch Function Switch & REC CAL Tone Sub (2)				F-2686	F-2686
Protector				F-2689	F-2689
Tuner Sub					F-2615
Dolby Change					F-2633
Dolby Sub					F-2652
Dolby					F-2688

Tuners

TU-xxx Series Tuners	TU-666	TU-999
AM IF	F-1255	F-1038-1
FM IF	F-1262	F-1103A
Power	F-1270	F-1137A
AM Meter		F-1220
Audio Amp		F-1236
MPX	F-1239-1A	F-1273
MPX Differential Amp	F-1245	
Muting		F-1332

TU-xx00 Series Tuners	TU-5500	TU-7700	TU-9900
	1976		
Tuner	F-1506B	F-1507	
Power Supply	F-1511	F-1511	F-2527
Multi-Path		F-1512	
Front-End Pack		F-1519	
FM IF			F-2524
FM Discriminator			F-2525
FM MPX			F-2526
Switch			F-2528
AM IF			F-2539
Illumination			F-2552
MPX Noise Amp			F-2559
Indicator			F-2565
FM Front-End Pack			PA5331P

TU-x17 Series Tuners	TU-717
	1977
Tuner	F-2678
Accessory SW & Calibration	F-2679
Selector SW & Muting	F-2680
Power Supply	F-2681
Indicator	F-2703
FM Discriminator	F-2730

TU-x19 Series Tuners	TU-919
	1979
Tuner	F-2870
Digital Display	F-2871
AM, FM Band Width Switch Board	F-2872
Buffer Amp Board	F-2875
Power Supply	F-2876
Pre Scaler	F-3010

TU-xxx Series Tuners	TU-999
	1970
AM IF	F-1038-1
FM IM	F-1103A
Power	F-1137A
AM Meter	F-1220
Audio AMP	F-1236
MPX	F-1273
Muting	F-1332

Other Products

Cassette Deck	SC-1330
	G-1242
	G-1243
	G-1244
	G-1261
	G-1265

Graphic Equalizer	SE-7
	F-3166
	F-3167

