


SONY TA-1150 CIRCUIT DIAGRAM

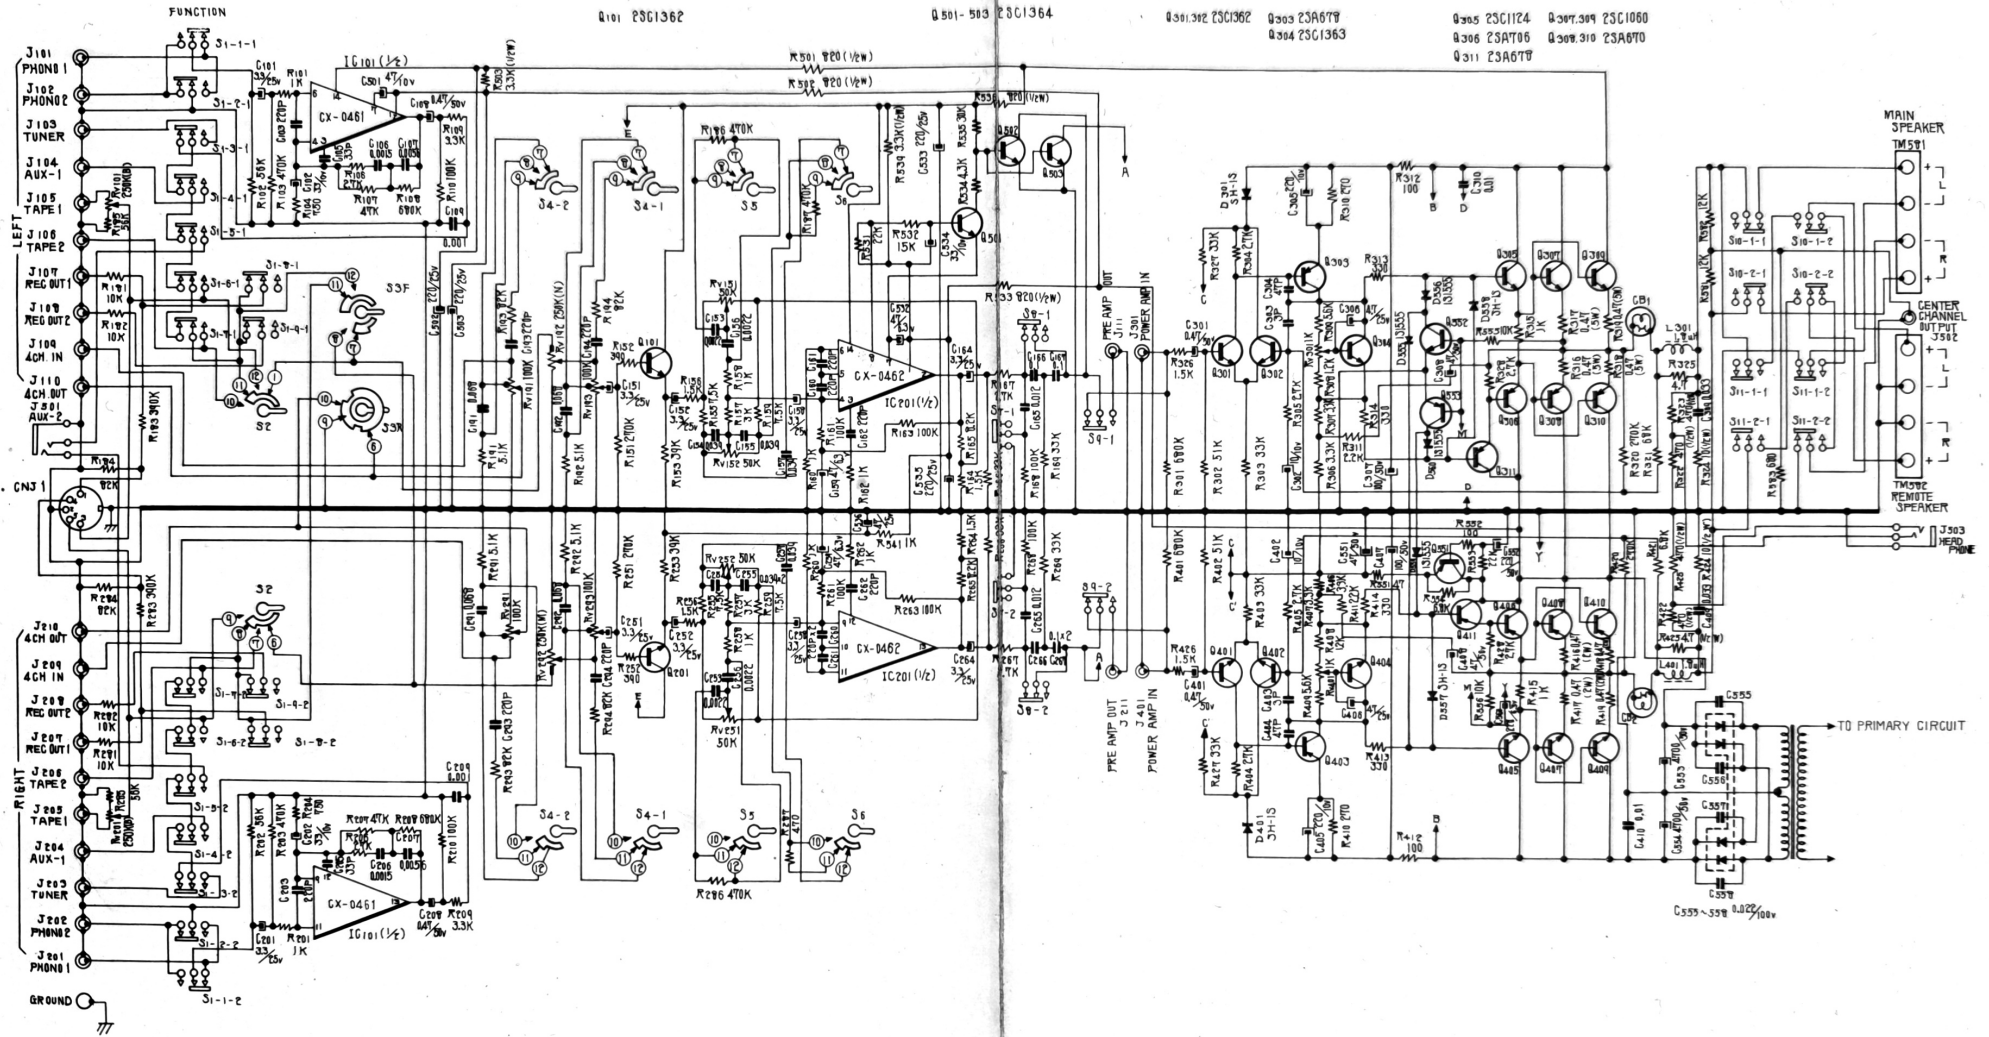

S1	FUNCTION SWITCH	PHONO-1 POSITION
S2	MONITOR	SOURCE
S3	MODE	2 CH
S4	LOUDNESS	ON
S5	TREBLE TURN OVER	2.5KHz
S6	BASS TURN OVER	500Hz
S7	HIGH FILTER	OFF
S8	LOW	
S9	PRE AMP/POWER AMP	NORMAL
S10	MAIN SPEAKER	ON
S11	REMOTE	OFF
S12	POWER	ON

P1	VOLUME CONTROL
P2	BALANCE
P3	TONE TREBLE
P4	TONE BASS
P5	BIAS CURRENT ADJ