




CASSETTE TAPE DECK


CT-F6161


FV KCU

Sensing circuit ass'y RWR-025

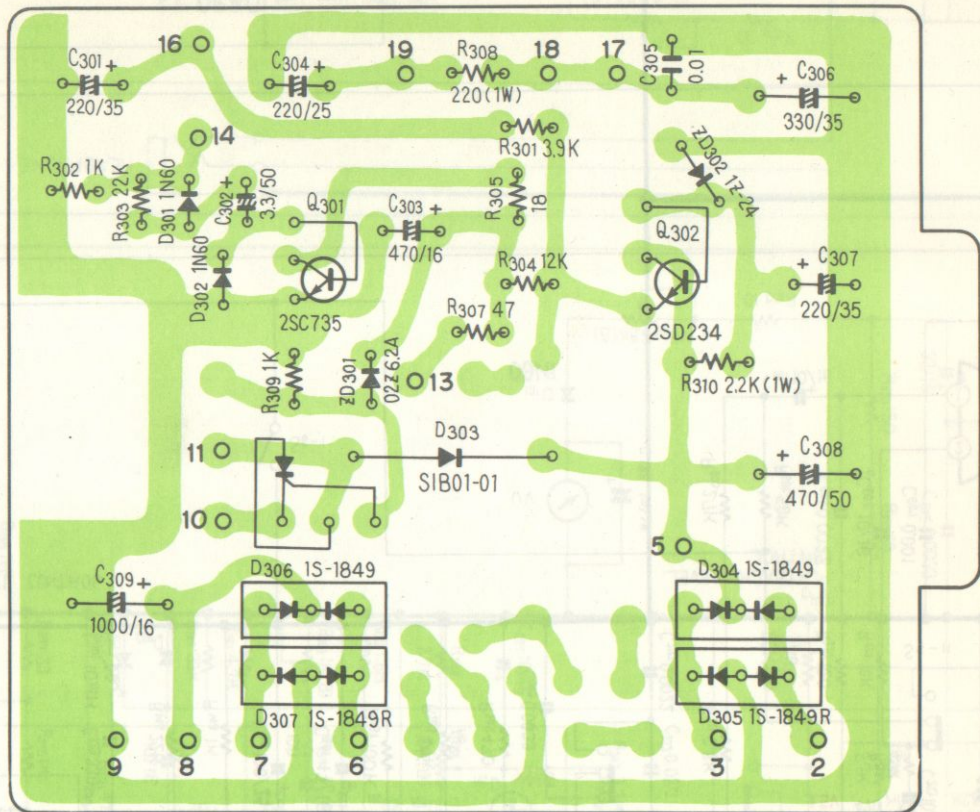

Switch ass'y RWS-023

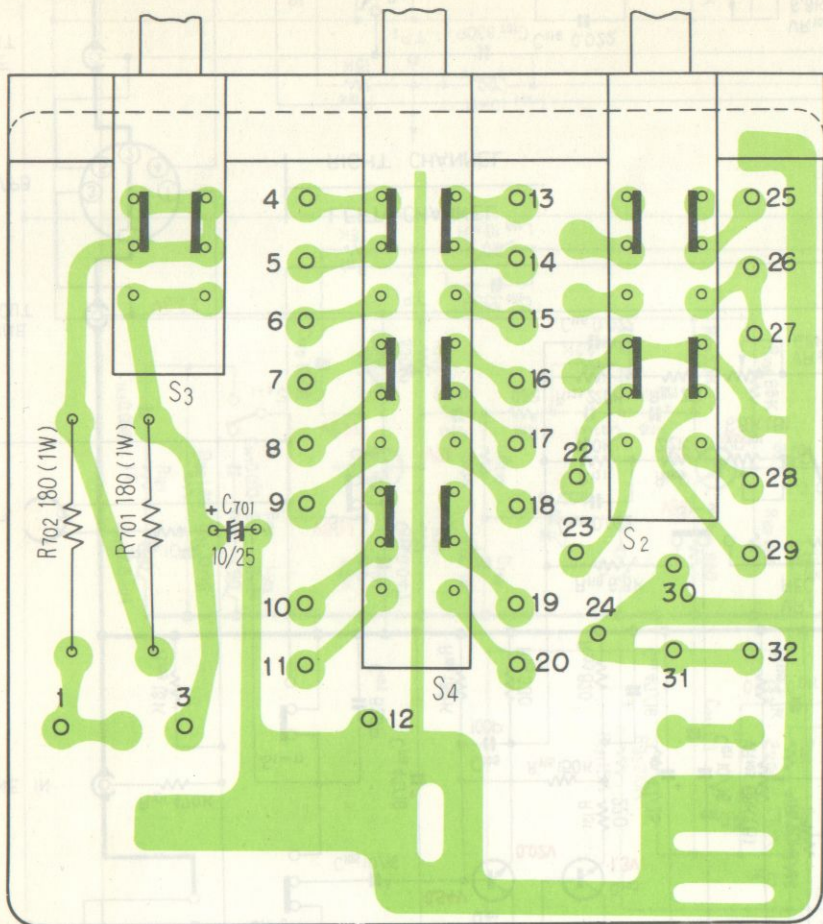

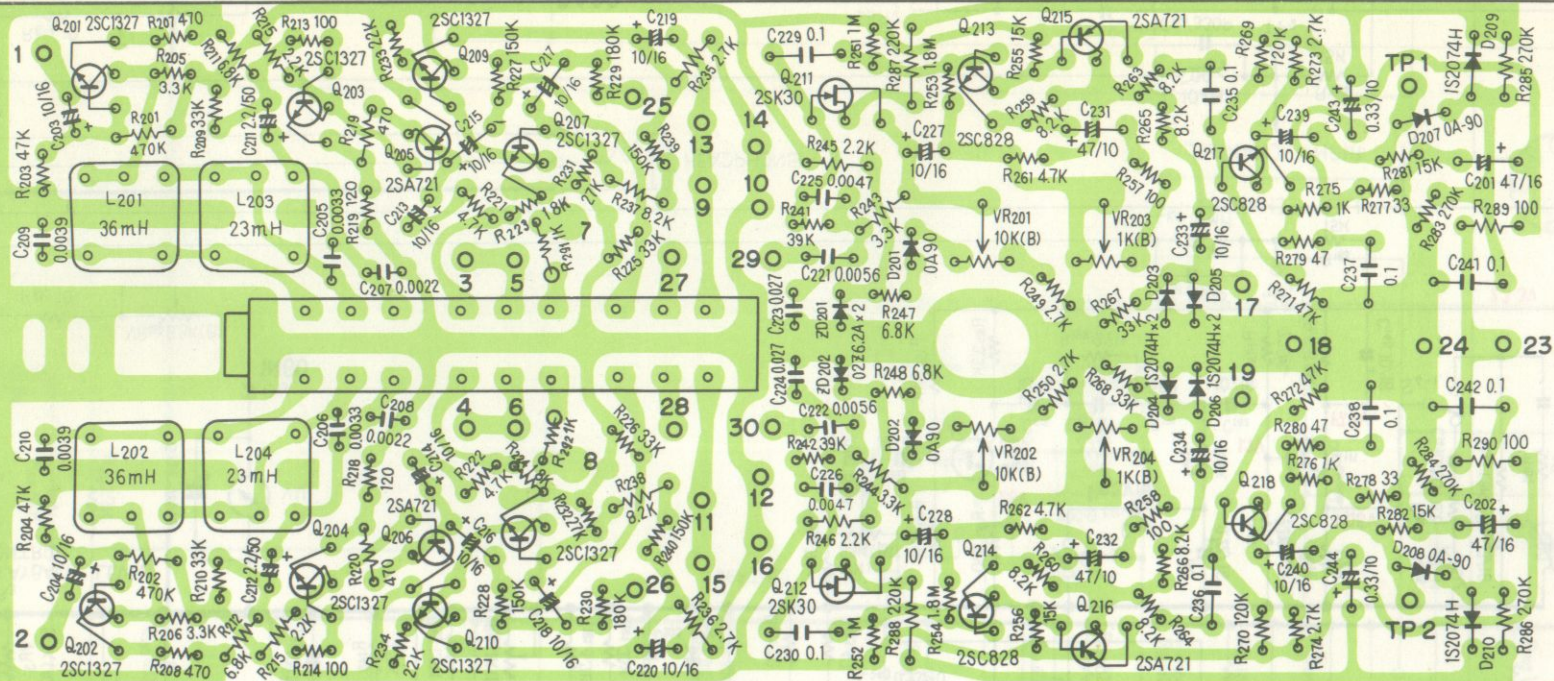

Q₁~Q₄, Q₇, Q₈ 2SC1327 x6

Q₂₀₁~Q₂₀₄ 2SC1327 x4

Q₂₀₅, Q₂₀₆ 2SA721 x2

Q₂₀₇~Q₂₁₀ 2SC1327 x4


Q₂₁₃, Q₂₁₄ 2SC828(H) x2

Q₂₁₅, Q₂₁₆ 2SA721 x2

Q₂₁₇, Q₂₁₈ 2SC828(H) x2

Q₁₀₁~Q₁₁₂ 2SC828(H) x4

IC₁₀₁, IC₁₀₂ TA7066P x2

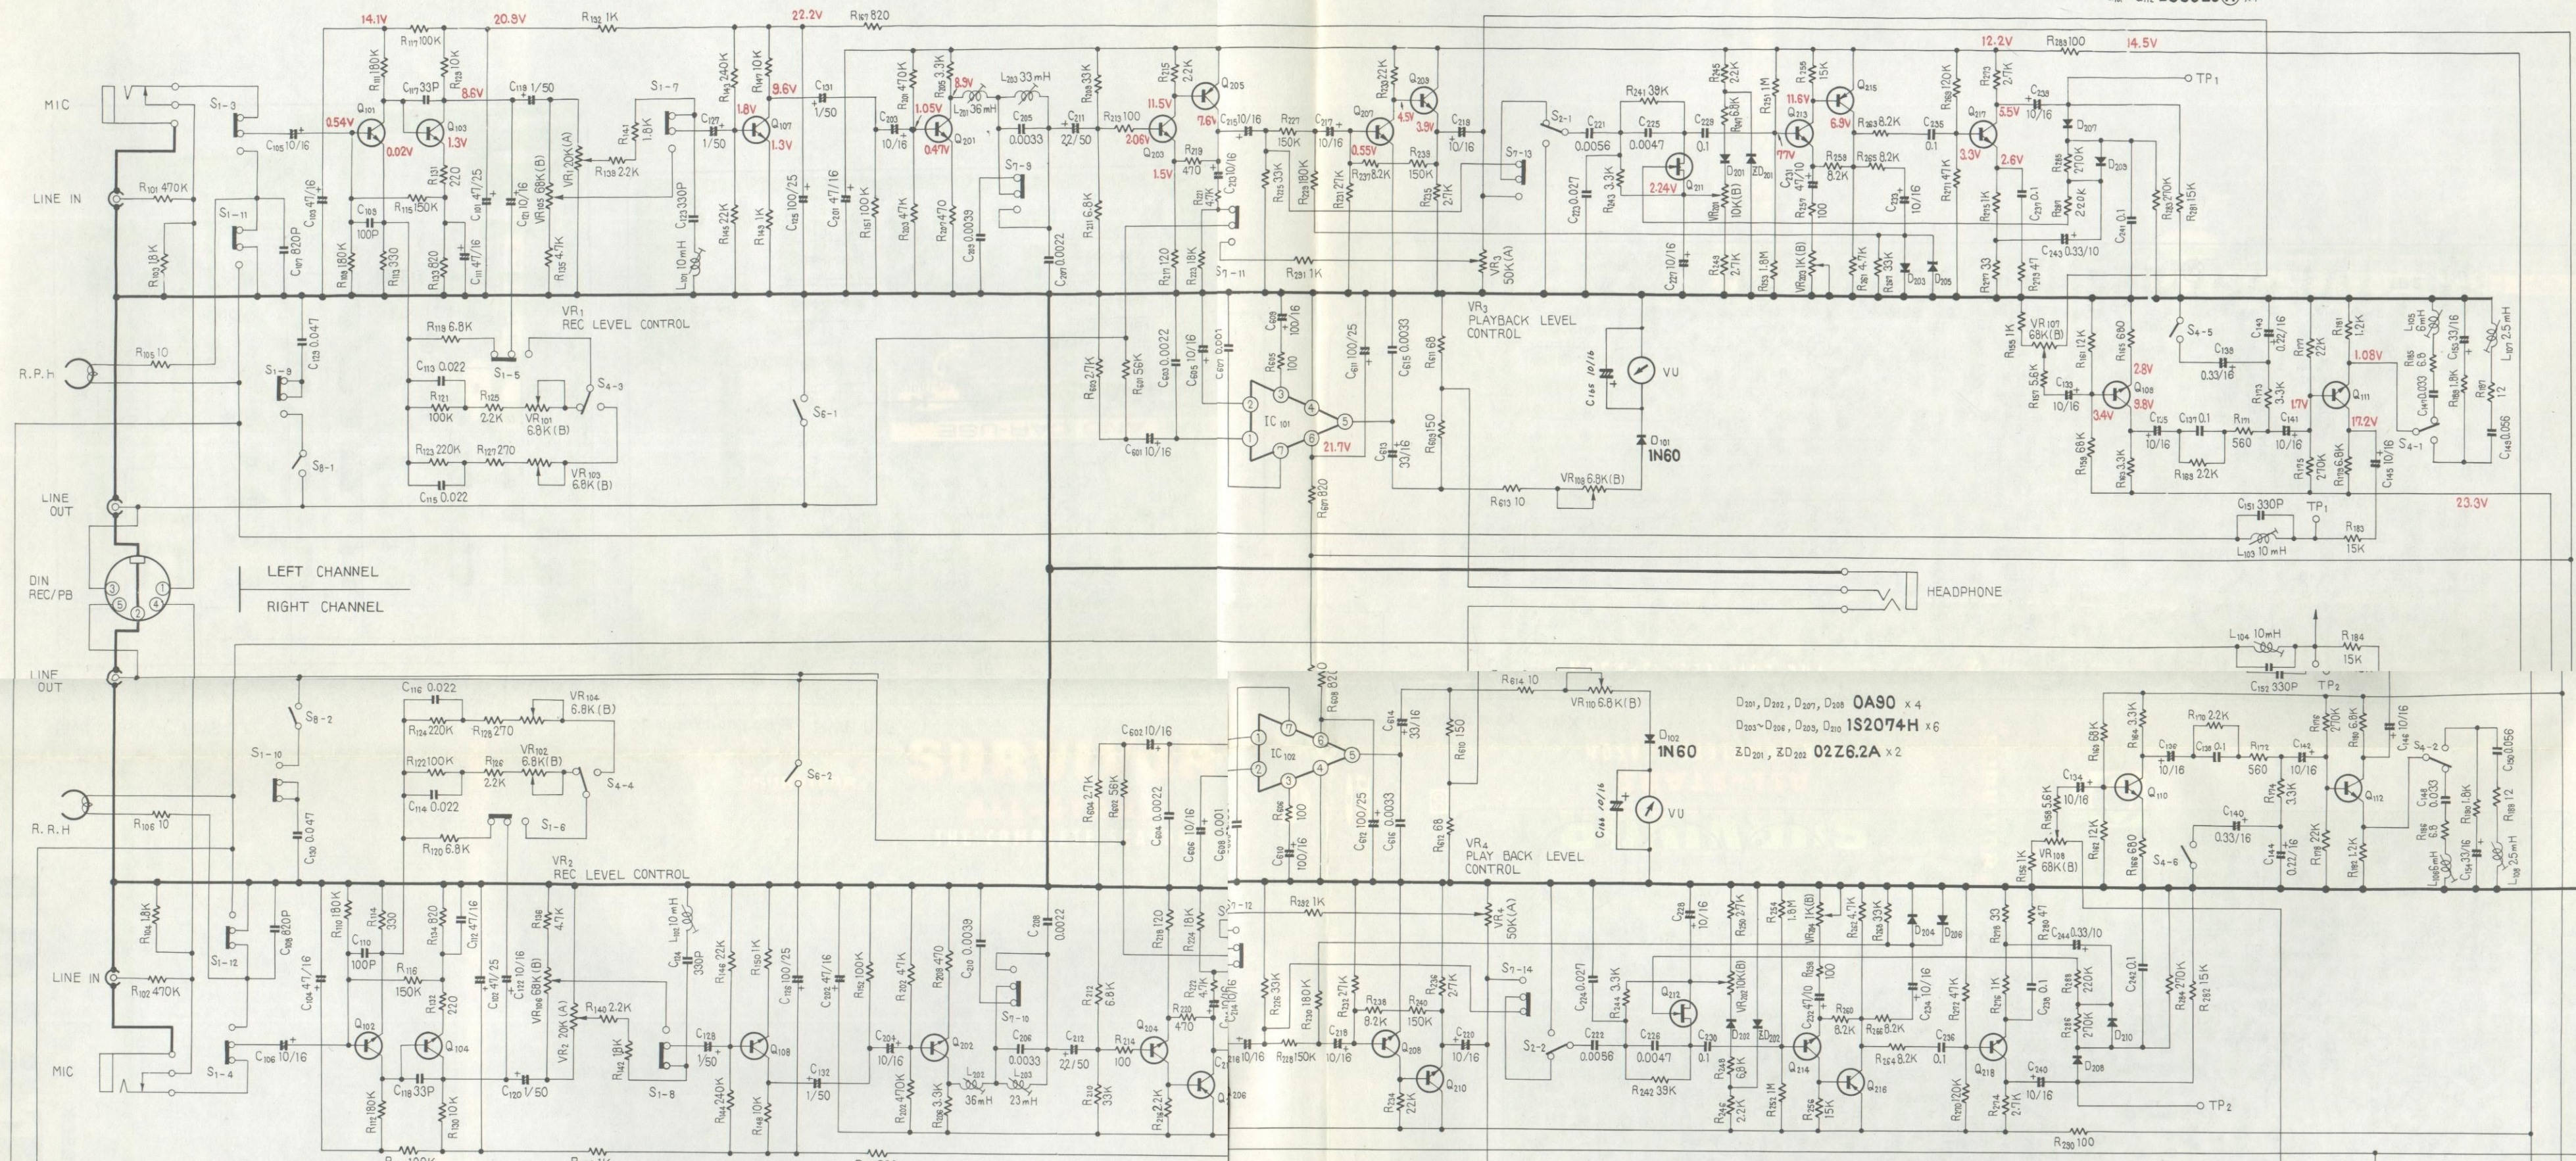

- SWITCHES:**
- S₁, S₇: REC. P.B. SELECTOR SWITCH
 - S₂: DOLBY SWITCH
 - S₃: BIAS SWITCH
 - S₄: POWER SWITCH
 - S₅: MUTE SWITCH
 - S₆: SKIP (Cueing) SWITCH
 - S₈: PAUSE SWITCH
 - S₉: PLAY SWITCH
 - S₁₀: SENSING SWITCH

NOTE:
RESISTOR
IN OHM, 1/4W, ±5% TOLERANCE UNLESS
OTHERWISE NOTED K: KΩ, M: MΩ

CAPACITORS
IN μF UNLESS OTHERWISE NOTED
P: pF

