

SPECIFICATIONS

FM

Circuits:

Low noise front end consisting of grounded grid, cathode fed RF amplifier, double tuned overcoupled RF interstage, and low noise grid fed triode mixer, followed by wide band, transitionally coupled IF stages. Armstrong circuit with pentode limiter, wide band Foster-Seeley discriminator and Automatic Frequency Control.

Sensitivity:

2.5 microvolts (20 db of quieting), 5 microvolts (30 db of quieting).

Selectivity:

0.6 megacycles.

Discriminator Peak to Peak Separation:

88-108 MC

Frequency Range:

± 5 KC maximum.

Drift:

40 db

Image Rejection:

60 db

IF Rejection:

300 ohms

Antenna Input:

Less than 0.5% IM at 30% modulation.

Distortion:

±0.75 db 30-15,000 cps including standard 75 micro-second de-emphasis.

Frequency Response:

60 db below 100% modulation.

Hum Level:

Within FCC requirements.

Radiation:

AM

Circuits:

Low noise, high gain RF pentode followed by a pentagrid converter, wide band IF stage and a high permeance crystal detector with quick action AVC. High pick-up sensitivity resulting from the use of a special litz wire high-Q ferrite loopstick.

Sensitivity:

80 microvolts per meter. Terminal sensitivity 10 microvolts.

Selectivity:

10 KC bandwidth: 60 db down.

Frequency Range:

530-1640 KC

Image Rejection:

55 db

IF Rejection:

55 db

Antenna Input:

Built-in low noise ferrite loopstick with low impedance terminal for external antenna.

Distortion:

Less than 1% harmonic.

Frequency Response:

±3 db 20-5,000 cycles.

Hum Level:

45 db below 80% modulation.

AUDIO

Circuits:

Four 7408 beam pentodes in self-biased push-pull circuits.

Output Level:

30 watts total; 15 watts per channel at less than 0.6% harmonic distortion (1000 cps).

Peak Power:

60 watts total; 30 watts per channel.

Output Impedance:

8 & 6 ohms

Frequency Response:

±0.5 db 15-30,000 cps at 1 watt.

±1.0 db 35-20,000 cps at 15 watts.

85 db below 15 watts.

Minimum Volume Hum:

Tuner, Aux. & Phono Hum (Hi-Level):

70 db below 15 watts (0.5 volt input reference).

Phono Hum (RIAA Position):

60 db below 15 watts (1 mv input reference).

Tape Input Hum:

55 db below 15 watts (1 mv input reference).

Cross Talk:

Better than 50 db.

Tone Control Range:

±12 db at 50 cps.

±12 db at 10,000 cps.

Rumble Filter:

10 db per octave below 50 cps.

Scratch Filter:

10 db per octave above 5 KC

Input Levels:

Aux., 300 millivolts. Phono (mag): 3 mv. at 1 KC. Will not overload with input level below 180 mv. Tape: 1 mv. at 250 cps.

1 volt from each channel, unmodified by volume and tone controls.


RIAA

NARTB 7½ IPS.

337

Harman-Kardon, Inc., 520 Main Street, Westbury, L. I., N. Y.

harman kardon

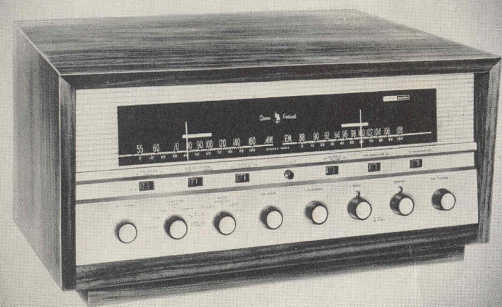

Stereo Festival

MODEL TA230

INTEGRATED STEREPHONIC RECEIVER

INSTRUCTIONAL MANUAL

It is essential you read this instruction booklet carefully before installing your Stereo Festival. You have invested in the finest high fidelity stereophonic control center available, into which many important and excellent engineering developments have been incorporated. Each is necessary for the proper operation of your system.

This instruction booklet has been written in simple non-technical language. If you will take time to read it first before doing anything else, you will find it an easy task to install and operate your new Model TA230 stereophonic receiver. KEEP THIS BOOKLET AVAILABLE AT ALL TIMES FOR IT CONTAINS INDISPENSIBLE TECHNICAL AND SERVICE INFORMATION.



This is the Harman-Kardon Stereo Symbol. It is your assurance of superb stereo performance.

GENERAL DESCRIPTION

The Stereo Festival, Model TA230, is by far the most versatile instrument ever designed. It may be used in any of the following ways.

- 1—Monophonic AM or FM Receiver.
- 2—Stereophonic Simulcast AM-FM Receiver.
- 3—Stereophonic FM Multiplex Receiver when used with the Harman-Kardon Multiplex Adapter, Model MX20.
- 4—Stereophonic Preamplifier-Amplifier for records and tape.

UNPACKING

After removing the Stereo Festival from the shipping carton, inspect it carefully for signs of transit damage. The unit was subjected to many inspections and tests at the factory prior to final packing, and it therefore should be in perfect condition. If damage is visible, notify your dealer at once. If the instrument was shipped to you, notify the transportation company without delay.

Check the contents of the carton and folds of the packing material carefully before discarding it. The package should contain the following items:

- 1 Stereo Festival, Model TA230
- 1 Instruction Booklet
- 1 Mounting Template and Mounting Instructions
- 1 Warranty Card
- 1 Package of Hardware for cabinet installation

WARRANTY POLICY

We urge you to completely fill in your warranty card and mail it to the factory without delay to protect your rights under warranty. The warranty cards are carefully filed for reference and should you require information on the use of this high fidelity unit, or repair service, we will be able to identify your set and reply quickly.

NOTE: It is necessary to receive factory authorization before returning a set for warranty repair either to the factory or to an authorized station. Repairs are to be returned on an Express Prepaid basis. A letter describing the exact difficulty must be enclosed with the unit.

WARRANTY

We warrant each Model TA230 to be free from defects in material and workmanship under normal use and service, and in accordance with the conditions herein below set forth, for a period of 1 year from date of delivery to the original purchaser, and agree to replace or repair any part or parts, with the exception of tubes which are under the manufacturer's 90 day warranty, returned to us within said 1 year, with transportation prepaid and which our examination shall disclose to our satisfaction to have been thus defective. This warranty does not include free labor, nor is it applicable to any instrument which shall have been repaired or altered in any way so as in our judgment to affect its stability or reliability nor which has been subject to neglect, misuse, abuse, negligence or accident nor which has had the serial number altered, effaced, or removed. Neither shall this warranty apply to any instrument which has been connected otherwise than in accordance with instructions furnished by us.

This warranty is expressly in lieu of all other warranties, express or implied, and of all other obligations or liability on our part, and we neither assume nor authorize any representative or other person to assume for us any other liability in connection with the sale of this instrument.

USING THE MODEL TA230 AS AN INTEGRATED STEREOPHONIC CONTROL CENTER

INSTALLATION PROCEDURE

Ventilation:

The unit is well ventilated in itself, but sufficient space must be allowed around it to permit proper air flow. Install the Stereo Festival in a manner to allow for unrestricted circulation. Do not place books or other objects on the cage or cabinet or in the immediate vicinity of the instrument. Reducing the air flow will result in sharply reduced component and tube life. Allow at least 4 inches above the unit when custom installing into a cabinet. Refer to mounting instruction sheet for cabinet installation procedure.

Power Requirements:

Plug the AC line cord into any outlet furnishing 117 volts, 50 or 60 cycles AC current. The voltage may vary between 105 and 125 volts.

Two AC convenience outlets are located on the rear panel of the instrument. The outlet marked 1 AMP SWITCHED is controlled by the ON/OFF push button on the front of the unit. The lower outlet is marked 2 AMPS NOT SWITCHED and is unaffected by the front panel power switch. Plug your record player into this AC outlet. This will necessitate your individually switching off your phonograph and will prevent the phono idler wheel from developing flats which might occur if you turned off the Stereo Festival and forgot to disengage the phonograph.

CAUTION: Do not exceed the amperage limits on each AC convenience receptacle.

Connecting the Speakers:

Your two speakers should be identical if possible to obtain optimum results. Experts agree that a perfectly matched system offers the best stereophonic reproduction. The speakers should be preferably placed along the same wall approximately 8 to 15 feet apart depending upon room size and furniture placement. It may be necessary to experiment with speaker placement until best results are obtained.

Use any type wire to connect your speakers to the Stereo Festival. Lamp cord ("zip cord") is excellent and may be easily dressed around the molding for an inconspicuous and neat installation. Do not drive the staples or tacks through the center of the wire for this will short out the two sections and will decrease the overall volume or short out the speakers entirely. It is permissible to use approximately 100 feet of speaker connecting wire for each speaker without loss of volume.

Connect one length of lamp cord to your left speaker and attach the other end to the LEFT SPEAKER terminals on the rear panel of the TA230. Similarly connect another length of lamp cord to your right speaker and attach the other end to the RIGHT SPEAKER terminals on the rear of the unit. If your speakers have an impedance of 4 to 12 ohms, throw the IMPEDANCE SELECTOR switch located above the speaker hookup terminals to 8 Ω . If your speakers have an impedance of 12 to 20 ohms, throw the IMPEDANCE SELECTOR switch to 16 Ω . Carefully dress the speaker leads away from audio input cables and power lines. Keep the wiring neat and away from transformers and tubes to reduce hum pickup.

Connecting The FM Antenna:

Due to the exceptionally high FM sensitivity of the TA230, the 48" piece of wire supplied with the unit will be sufficient antenna for all but the most difficult locations. One end of this wire should be stripped of insulation and attached to the rear screw terminal marked FM on the Antenna Terminal strip located on the rear of the chassis. The other end of this wire should be extended horizontally along the cabinet or table. Horizontal placement of the antenna wire provides proper polarization for optimum reception.

If an outdoor antenna is required to "reach" for distant stations, use a folded dipole or Yagi specifically cut for the FM band. A homemade 300 ohm "T" type antenna is not satisfactory and should not be used as a substitute for the 48" piece of wire supplied with the set. The "T" type antenna has a tendency to pick up extraneous noise.

TV antennas are rarely satisfactory as they are not cut for the FM band and have a tendency to introduce ignition noise and other interference into the tuner circuit. They are not recommended except under unavoidable circumstances. Usually better results can be obtained with the 48" piece of wire.

When using an outdoor antenna, attach the 300 ohm lead-in wire (twisting it 4-5 times for each running foot) to the antenna terminals on the rear of the TA230 marked FM and G.

Connecting The AM Antenna:

The AM swivel loopstick antenna on the rear of the TA230 chassis comprises all the antenna required for normal signal areas. In more remote locations an additional outdoor antenna may be necessary. This should consist of a single wire, as long as is reasonably practical. It must be kept away from large metal objects, power lines or electrical machinery to insure reception without extraneous noise. Attach the external antenna to the rear terminal strip marked AM. The AM loopstick antenna may be swiveled as required for custom and bookshelf installation. If the metal cage is used, the loopstick should be moved down and away from the cage to prevent cancellation of the AM signals.

Connecting Your Stereo Record Player:

A stereophonic cartridge uses two output plugs. Provision has been made on the Stereo Festival to accommodate any of the three types of phonograph pickups available on the market.

MAGNETIC CARTRIDGE: The TA230 has two separate sets of low level inputs on the rear of the chassis marked MAG 1 and MAG 2. This enables the user to simultaneously connect a record changer and turntable arm to the receiver, or a tape playback deck and record player if preferred. The inputs are selected by the front panel MAGNETIC INPUT switch.

Connect the two outputs of your stereo magnetic cartridge to the L and R MAG 1 inputs on the TA230 chassis. Connect your other stereo magnetic cartridge or tape deck to the L and R MAG 2 input jacks.

CERAMIC CARTRIDGE: Connect the two outputs of your stereo ceramic cartridge to the L and R EXTRA inputs on the rear of the TA230 chassis. There are several stereo ceramic cartridges available that offer low output and are to be plugged into the MAG 1 or MAG 2 inputs instead of the usual high level EXTRA receptacles. Follow the cartridge manufacturer's recommendations.


CRYSTAL CARTRIDGE: Connect the two outputs of your stereo crystal cartridge to the L and R EXTRA inputs on the rear of the TA230 chassis.

Connecting A Monophonic Record Player:

A monophonic record player uses one connecting plug. If you are using a low output magnetic type cartridge, connect it to either the L or R MAG 1 or MAG 2 input. If you are using a monophonic ceramic or crystal cartridge, connect it to either the L or R EXTRA input.

IMPORTANT: When the TA230 is used only for monophonic operation (and stereo is to be added at some later date) it is essential that both speaker output terminals are terminated into speakers or into a speaker and resistive load. For example, if you have only one speaker, attach it to the Left Speaker Output connections and connect an 8 or 16 ohm 25 watt wirewound resistor to the Right Speaker Output connections. This will assure proper loading of the output stage and will prevent damage to the output tubes. A more satisfactory solution would be to connect an additional speaker for monophonic listening instead of the 8 or 16 ohm resistor. Refer to Diagram A.

Diagram A

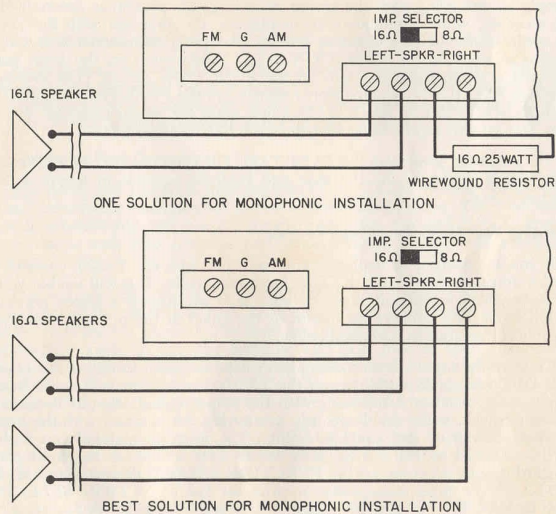

Connecting Your Stereo Tape Deck:

A stereophonic tape deck utilizes two playback heads usually contained in

one head assembly. Each head has its own output plug. Connect both plugs to the L or R MAG 1 or MAG 2 input receptacles located on the rear of the TA230 chassis.

Connecting Your Monophonic Tape Deck:

Attach the shielded lead from the monophonic tape head to either the L or R MAG 1 or MAG 2 input receptacle.

Connecting Your Stereo Tape Recorder:

Since most stereophonic tape recorders have their own preamplifiers, it is not desirable to connect the output of the recorder into the low level MAG 1 or MAG 2 input receptacles. This could result in overloading of the input stage and cause distortion. Connect one tape recorder output cable to the L EXTRA input and the other output cable to the R EXTRA input receptacle.

These connections will enable you to play back your stereo tapes. To make a stereo recording connect your recorder as follows:

Connect the left input of your tape recorder to the TA230 L TAPE OUT receptacle. Similarly connect the right input of your recorder to the R TAPE OUT receptacle located on the rear panel. This will enable you to make a stereophonic recording with the proper recording equalization as determined by your recorder, while simultaneously monitoring the program with the proper tone control, contour and loudness setting. The program material you wish to record is selected by the FUNCTION SELECTOR switch on the front panel. To record a stereo radio program set the FUNCTION SELECTOR switch to AM-FM or FM MULTI. To tape stereo records, set the FUNCTION SELECTOR switch to MAG-PHO or EXTRA depending upon the stereo cartridge you are using. The MODE switch must remain in the STEREO position.

The recording level from the TA230 TAPE OUT receptacles is approximately 1 volt and is unaffected by the tone and loudness controls to assure a "flat" recording signal.


Connecting Your Monophonic Tape Recorder:

If you are using a monophonic tape recorder with the TA230, connect the recorder output to the L or R EXTRA input receptacle. This will enable you to play back your monophonic tapes. If your tape recorder is a stereo playback-monophonic record, connect the output as described in the previous paragraph, but connect the input as described below.

Connect the input of your monophonic tape recorder to either the L or R TAPE OUT receptacle on the rear of the TA230 chassis. This will enable you to make a monophonic tape recording with the proper equalization as determined by your recorder, while simultaneously monitoring the program with the proper tone control, contour and loudness setting. The program material you wish to record is selected by the FUNCTION SELECTOR switch on the front panel. To record a radio program, set the FUNCTION SELECTOR switch to AM, FM or FM-AFC. To tape monophonic records, set the FUNCTION SELECTOR switch to MAG-PHO or EXTRA depending upon the cartridge you are using. If you are using a stereo cartridge, set the MODE switch on the front panel to MONOPHONIC. If you are using a monophonic cartridge, set the MODE switch to RIGHT or LEFT relating to the input used.

Connecting the Harman-Kardon FM Multiplex Adapter, Model MX20:

In those localities where FM Multiplex broadcasting is available, attach the adapter to the two MULTI IN receptacles on the rear of the TA230. FM program material for the adapter is supplied from the output receptacle labeled MULTI OUT. Follow the instructions supplied with the adapter for complete hookup information.

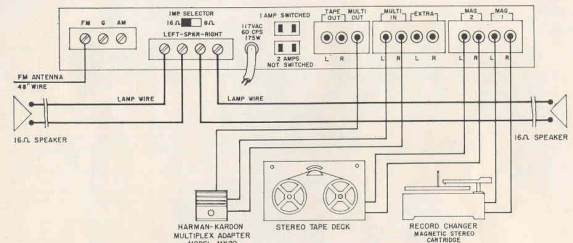

OPERATING THE MODEL TA230 AS AN INTEGRATED RECEIVER


Every control on a well designed and honestly considered high fidelity instrument has a specific useful function related to each of the other controls. A brief explanatory note on the relationship of the various front panel controls will doubtless prove useful in organizing and clarifying them for you.

Bass and Treble Tone Controls:

The BASS and TREBLE tone controls on the TA230 provide the full range of tonal adjustment necessary for stereo high fidelity listening. The tone control range is considerable and can adequately adjust the low and high frequencies in accordance with your listening preference, speaker characteristics and room acoustics.

You will note that the BASS and TREBLE controls each have two knobs, one in front of the other. The front knob controls the right channel and the rear knob controls the left channel. The front and rear knobs are coupled with a new type friction-clutch, so that the BASS or TREBLE tone of both channels can be adjusted simultaneously by turning the front or main body of the knob. However, if the two channels require different tone control settings, due perhaps to differences in speakers or room acoustics, the two BASS knobs may be adjusted independently to balance the differences, and from then adjusted simultaneously for best overall tone quality. The two TREBLE knobs can be similarly adjusted. To set the two knob-sections independently, hold one with your right hand while turning the other with your left hand.

To adjust the system set the MODE switch to MONOPHONIC and play a monophonic record or radio program. Set the two friction clutch tone controls in accordance with your speaker characteristics and room acoustics. The system will now be tonally balanced for monophonic and stereophonic listening.

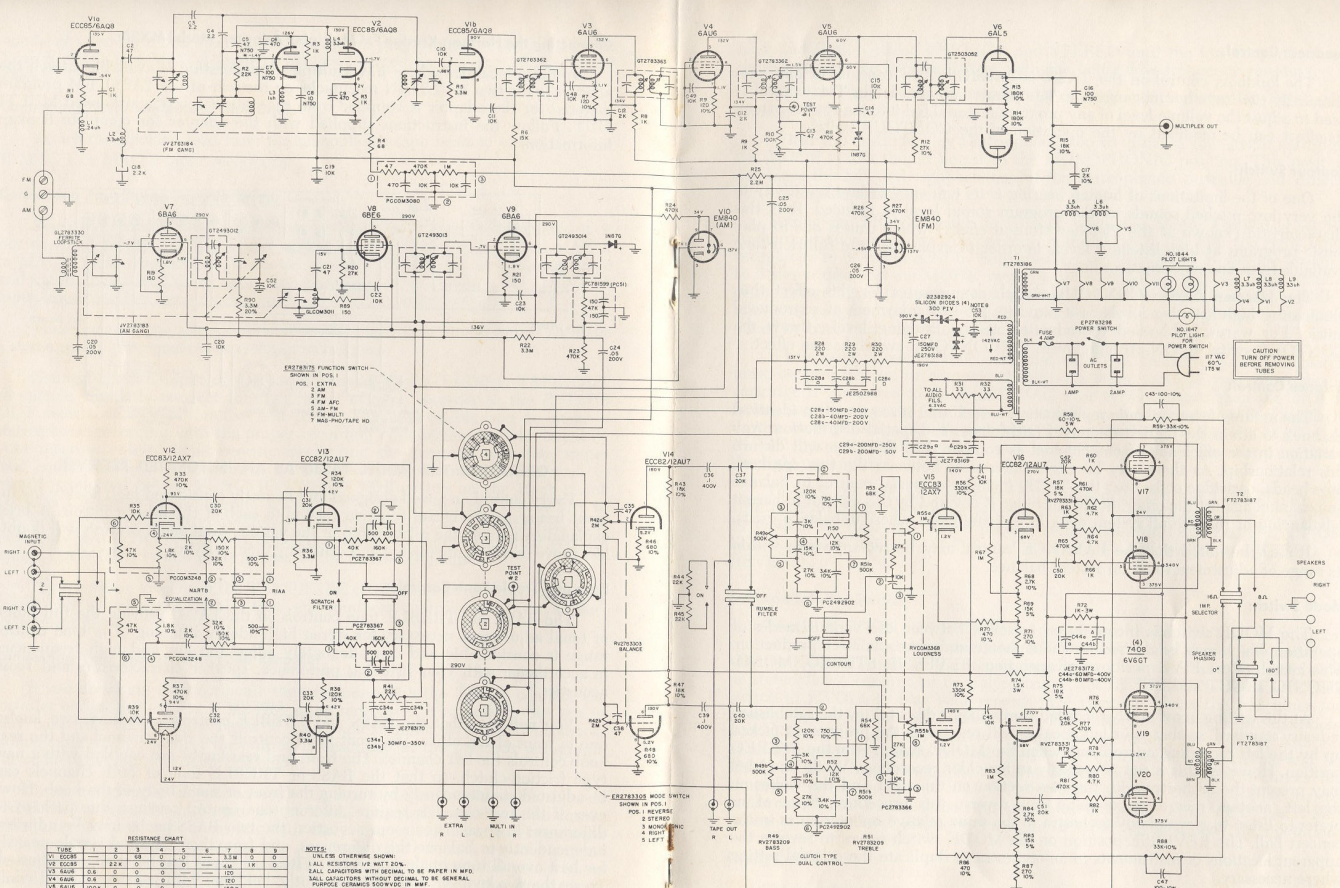

RESISTANCE CHART

TUBE	1	2	3	4	5	6	7	8	9
V1 6X4	0	100	0	0	0	0	0	0	0
V2 6AR5	22K	0	0	0	0	0	0	0	0
V3 6AV6	0	0	0	0	0	0	0	0	0
V4 6AU6	0	0	0	0	0	0	0	0	0
V5 6AV6	0	0	0	0	0	0	0	0	0
V6 6AL5	0	0	0	0	0	0	0	0	0
V7 6X4	0	0	0	0	0	0	0	0	0
V8 6AR5	0	0	0	0	0	0	0	0	0
V9 6AV6	0	0	0	0	0	0	0	0	0
V10 6AU6	0	0	0	0	0	0	0	0	0
V11 6AR5	0	0	0	0	0	0	0	0	0
V12 6AV6	0	0	0	0	0	0	0	0	0
V13 6AL5	0	0	0	0	0	0	0	0	0
V14 6AU6	0	0	0	0	0	0	0	0	0
V15 6AV6	0	0	0	0	0	0	0	0	0
V16 6AL5	0	0	0	0	0	0	0	0	0
V17 6AR5	0	0	0	0	0	0	0	0	0
V18 6AV6	0	0	0	0	0	0	0	0	0
V19 6AU6	0	0	0	0	0	0	0	0	0
V20 6AV6	0	0	0	0	0	0	0	0	0

NOTES:
 1. ALL RESISTORS 1/2 WATT 50%
 2. ALL CAPACITORS WITH SIGNAL TO BE PAPER IN MFD
 3. ALL CAPACITORS WITHOUT SIGNAL TO BE GENERAL
 4. ALL CAPACITORS WITHOUT SIGNAL TO BE GENERAL
 5. ALL CAPACITORS WITHOUT SIGNAL TO BE GENERAL
 6. ALL CAPACITORS WITHOUT SIGNAL TO BE GENERAL
 7. 500K 1/2W 50%
 8. 100K 1/2W 50%
 9. 10K 1/2W 50%
 10. 1K 1/2W 50%
 11. 100 1/2W 50%
 12. 10 1/2W 50%
 13. 1 1/2W 50%
 14. 0.1 1/2W 50%
 15. 0.01 1/2W 50%
 16. 0.001 1/2W 50%
 17. 0.0001 1/2W 50%
 18. 0.00001 1/2W 50%
 19. 0.000001 1/2W 50%
 20. 0.0000001 1/2W 50%
 21. 0.00000001 1/2W 50%
 22. 0.000000001 1/2W 50%
 23. 0.0000000001 1/2W 50%
 24. 0.00000000001 1/2W 50%
 25. 0.000000000001 1/2W 50%
 26. 0.0000000000001 1/2W 50%
 27. 0.00000000000001 1/2W 50%
 28. 0.000000000000001 1/2W 50%
 29. 0.0000000000000001 1/2W 50%
 30. 0.00000000000000001 1/2W 50%

VOLTAGE & RESISTANCE READINGS
 BALANCE CONTROL CENTER
 LOUDNESS CONTROL, MAX. & C. 1/2
 TUNING & BAND CONTROLS PLATE
 CONTROLS SWITCH UP
 FUNCTION SWITCH IN MAX. FM POSITION
 SLEEP OFF POSITION
 6251

CAUTION
 TURN OFF POWER
 BEFORE REMOVING
 TUBES

Loudness Control:

The loudness control on the TA230 is essentially two controls in one, mechanically tied together or ganged, to be operated by one knob. This control is used to adjust the volume level of any program material fed into the stereo system. Its effect can be modified by the operation of the CONTOUR switch.

Contour Switch:

One of the limitations of human hearing is its tendency to lose sensitivity to the very low pitched sounds as the program sound level is reduced. It is this characteristic (known as the Fletcher-Munson effect) which causes one to play music programs at high listening levels in order to experience the full rich tone available from fine modern recordings.

The Harman-Kardon CONTOUR switch compensates for this effect thus eliminating high listening levels as a requisite for full enjoyment of reproduced music. For warm, full-bodied reproduction at low listening levels, throw the CONTOUR switch to ON. At high levels, the CONTOUR switch has no effect.

Balance Control:

The nature of stereophonic reproduction is such that it requires two identical channels to attain the highest degree of faithfulness and spatial distribution. Any variation in the efficiency of one channel as compared to the other will disturb this relationship. As there may be slight differences between the two speakers, tape heads, cartridge coils, etc., the TA230 includes a special control to balance one channel against the other. Sufficient range is covered by this control to permit rebalancing of the overall system even in extreme cases where unbalance exists.

It must be noted that the BALANCE control may be set anywhere within its range of adjustment to attain system balance.

Mode Switch:

The MODE switch is incorporated to select between the various modes of operation which may be desired for monophonic and stereophonic reproduction. This switch offers FIVE positions of operation. REVERSE, STEREO, MONOPHONIC, RIGHT and LEFT.

At this writing, most newly recorded stereophonic discs follow the established industry standard, so that your left speaker will reproduce the program as picked up by the left recording microphone when the MODE switch is in the STEREO position. However, this is not necessarily so for older recordings. While one label may present the orchestra with the bass section on the right and the violins on the left, another recording company may reverse this procedure. Some of us prefer to listen to a symphony orchestra in the same relative orientation as in the concert hall. The REVERSE position on the MODE switch serves to reverse the apparent locations of instruments in an orchestra to duplicate the original setting where necessary.

For those who do not have matched speakers for stereophonic reproduction, the REVERSE position on the MODE switch serves an additional purpose. In "Ping-Pong" stereo recordings, the bass is sometimes favored on one side, while the higher frequencies may appear on the other channel. By experimenting with the MODE switch it is possible to channel the low frequencies through the speaker system having the best bass response. Merely throw the MODE switch

back and forth between REVERSE and STEREO until the low frequencies are reproduced by the speaker system with the better low frequency response.

The STEREO position on the MODE switch maintains the Left-Right relationship for properly made records.

When you desire to play a monophonic record utilizing your stereo cartridge, the MODE switch should be set to the MONOPHONIC position. This position combines the left and right sections of the stereophonic cartridge and cancels vertical rumble and distortion.

Setting the MODE switch to RIGHT when the Stereo Festival is set for stereo reproduction allows any program material being fed into the right input receptacles to be reproduced by both speakers simultaneously. If you are listening to a stereo disc and the MODE switch is set to RIGHT, only the right channel of the recording will appear at the speakers. Setting the MODE switch to LEFT allows all program material being fed into the left input receptacle to be reproduced by both speakers simultaneously.

When using a monophonic cartridge with the TA230, the MODE switch must be properly set to correspond with the input used. If your monophonic cartridge is connected to the LEFT MAG 1 or MAG 2 input, then the MODE switch must be set to the LEFT position to activate the left preamplifier. Similarly if your monophonic magnetic cartridge is connected to the RIGHT MAG 1 or MAG 2 input, the MODE switch must be set to the RIGHT position to activate the right preamplifier.

To play the AM or FM tuner monophonically, set the FUNCTION SELECTOR switch to the desired position and turn the MODE switch to MONOPHONIC. To play the tuner portion stereophonically set the FUNCTION SELECTOR switch to AM-FM and turn the MODE switch to STEREO or REVERSE.

Function Selector Switch:

The FUNCTION SELECTOR switch selects the desired type of program source and has 7 switching positions. EXTRA selects any device connected to the two EXTRA inputs on the rear of the chassis. If you are using a monophonic or stereophonic ceramic or crystal cartridge, set the FUNCTION SELECTOR switch to EXTRA to play your records. AM position selects the AM tuner for monophonic operation; FM selects the FM tuner for monophonic operation. FM-AFC selects the FM tuner for monophonic operation, but with the addition of an automatic frequency control circuit. The operation of this circuit will be discussed in a later paragraph. AM-FM selects both AM and FM tuners for simulcast stereo reception. FM-MULTI activates the two multiplex receptacles on the rear of the chassis for multiplex reception. MAG-PHO/TAPE HD selects your low level magnetic cartridge or tape playback deck for operation.

FM-AFC:

FM broadcasting, by its very nature, eliminates almost all natural and man-made static. However, the characteristics of FM which makes this possible also causes problems in tuning. The TA230 incorporates a special electronic circuit known as Automatic Frequency Control that overcomes these problems and insures proper tuning even if the manual tuning is not accurately done. Therefore AFC always keeps the station in the center of the channel and eliminates distortion caused by inaccurate tuning.

In order to take maximum advantage of the benefits of AFC, it is suggested that fine tuning be done with the Function Switch in the FM position. When the switch is then turned to the FM-AFC position the AFC will improve this careful tuning by a factor of 10 to 1. This procedure is especially recommended when a weak station is being tuned on a channel adjacent to a stronger one. This will prevent the AFC from reaching for the more powerful signal and skipping over the weaker one. If the weaker station is tuned in without the AFC, when the AFC is applied it will lock it in permanently.

Magnetic Input Switch:

This front panel slide switch selects between MAG 1 and MAG 2 input receptacles on the rear panel of the chassis. If your stereo cartridge is connected to the L and R MAG 1 inputs and your stereo tape deck to L and R MAG 2, throw the MAGNETIC INPUT switch to position 1 for phono and to position 2 to play back your tapes.

NOTE: that operation of the MAGNETIC INPUT switch may require resetting of the EQUALIZATION switch as explained below.

Equalization Switch:

In order to achieve good reproduction of the wide range of frequencies in music and to make necessary adjustments for the limitations of the recording technique, record manufacturers have found it necessary to modify the actual frequency response of the music while it is being recorded. Thus, to avoid overcutting and consequent distortion, a measured and deliberate reduction is effected in low frequency response by selecting a "turnover frequency" and by recording attenuated response below that point. To assure optimum signal to noise at the high frequency end when the record is played at home, the highs are deliberately exaggerated during the recording process. A measured and deliberate boost is effected above a certain frequency. This combination of deliberate exaggeration at the low and high ends of the frequency response can be expressed in a recording curve. When the record is played a mirror image of that curve should be available so that the ideal "flat" response may be achieved.

The front panel EQUALIZATION switch selects the proper equalization for record and tape play back. When playing records with a magnetic cartridge throw this switch to the RIAA position. When playing tapes throw the switch to NARTB.

The EQUALIZATION switch must always be properly set in order to achieve best tone balance.

Scratch Filter:

In the event of objectionable high frequency record scratch throw the SCRATCH FILTER switch to ON. This will roll off the higher frequencies to clear up your older records.

Rumble Filter Switch:

At times, record changers, turntables and even some FM stations produce an objectionable low frequency signal that is strong enough to be introduced into the playback system. This is known as rumble and can be eliminated by the special low frequency roll off switch on the front panel. Whenever rumble is encountered throw the RUMBLE FILTER to ON.

Power On/Off Switch:

Depress the red push button power ON/OFF switch to turn the set on. Depress the button again to turn the set off.

Speaker Phasing Switch:

When more than one speaker is used in any music reproducing system they must be connected in a manner as to aid each other, rather than to work against one another. Since it is necessary to use two speakers for stereophonic reproduction, this caution applies. Checking for proper phase, and correcting if necessary, is quite simple.

Place the MODE switch in the MONOPHONIC position and play a monophonic record with readily apparent bass tones. Listen carefully to the strength and clarity of the bass while moving the speaker PHASING switch back and forth between 0° and 180°. Select the position on the PHASING switch which gives maximum bass reproduction. Once the phase is established the PHASING switch may remain in the set position or may be switched as preferred to test for proper phasing at any time. Improper speaker phasing will create what is commonly termed as a "hole in the middle" effect for stereophonic reproduction and at times will actually eliminate or shift certain instruments from their proper perspective in the orchestra.

AM and FM Tuning Controls:

These controls are located on the front panel and are used to tune for AM or FM stations. For simulcast AM-FM stereo reception, it is necessary to separately tune the AM and FM sections. Set the FUNCTION SELECTOR switch to AM and tune for the desired station. Now set the FUNCTION SELECTOR to FM and tune for the corresponding FM station. Turn the FUNCTION SELECTOR to AM-FM to operate both tuners simultaneously.

Tuning Indicators:

For ease and accuracy in tuning, the TA230 incorporates two electronic eye tuning indicators. When locating a station, tune for minimum dark space between the green bars.

MAINTENANCE AND REPAIRS

Hum and Noise:

In any high fidelity installation, hum may be caused by the interconnection of a record player, tuner and amplifier, as a result of the cables and different grounds. If hum is experienced with the TA230, disconnect everything but the speakers from the receiver. If hum persists, reverse the AC line cord. Also perform the balancing adjustments outlined in a later paragraph. Plug in the record player and if hum appears, reverse the record player power plug and connect a single lead from the record player chassis to a good ground point on the chassis of the TA230. Connect your other devices in this manner. CAUTION: Hum may be also induced by defective connecting cables or by running these cables too close to a strong AC field.

Output Tube Balancing Controls:

There are two OUTPUT TUBE BALANCING CONTROLS located between the output tubes. These controls are factory adjusted and should not be touched

unless tubes are changed. If adjustment is necessary follow the procedure listed below.

1. Set the **LOUDNESS CONTROL** to minimum.
2. Slowly rotate each **BALANCING CONTROL** for minimum hum.
3. If the hum level is not readily apparent, set the control to the mid-position.
4. For absolute accuracy use an IM analyzer and set for lowest IM distortion.

Replacing Output Tubes:

It is permissible to replace the 7408 output tubes of this receiver with 6V6GT's. This may cause a slight power loss and a slight increase in intermodulation distortion.

Fuse:

The TA230 is fused in the AC primary to prevent damage of tubes and components. The value of the fuse is 4 AMP, TYPE MTH4 and should be replaced only with one of the same rating. Replacing with a fuse of a higher rating will not protect the instrument and may result in severe damage, which will not be covered by the factory warranty.

Tube Checking and Service:

It is recommended to test the tubes of this receiver every twelve months in order to insure optimum performance. When a tube is changed in the tuner portion, it may be necessary to have the instrument recalibrated and realigned.

If this instrument should not perform properly during the first year after date of purchase, contact the factory for instructions. **DO NOT** have it repaired locally without first contacting Harman-Kardon for advice. The factory has many authorized warranty service stations in the United States, and for the station nearest you, please write or call our Customer Service Department, Harman-Kardon, Inc. 520 Main Street, Westbury, L. I., New York. Be sure to include the model and serial number of the unit. A brief description of your other components is often of help in answering your questions.


ALIGNMENT PROCEDURE

FUNCTION SWITCH SETTING	SIGNAL GENERATOR		SIGNAL INPUT POINT	OUTPUT INDICATOR	CONNECT INDICATOR TO:	DIAL SETTING	ADJUST	OUTPUT INDICATION
	FREQ.	MOD.						
FM	10.7 MC	300 KC FM	FM MIXER GANG	AC-VTVM OR SCOPE	TEST POINT		3 FM IF TRANS. DISCR. TRANS.	MAX GAIN & SYMMETRY S PATTERN OF MAX GAIN & SYMM. OUTPUT
FM	10.7 MC	300 KC FM	FM MIXER GANG	AC-VTVM OR SCOPE	TEST POINT	106 MC	106 MC OSC RE. MIXER TRIMMERS	MAXIMUM OUTPUT
FM	106 MC	300 KC FM	FM ANT. TERMINAL	AC-VTVM OR SCOPE	TEST POINT	90 MC	OSC. RF. MIXER COILS	MAXIMUM OUTPUT

FUNCTION SWITCH SETTING	SIGNAL GENERATOR		SIGNAL INPUT POINT	OUTPUT INDICATOR	CONNECT INDICATOR TO:	DIAL SETTING	ADJUST	OUTPUT INDICATION
	FREQ.	MOD.						
AM	455 KC	30% AM	AM. RF GANG	AC-VTVM OR SCOPE	TUNER OUTPUT	1600 KC	2 AM IF TRANS.	MAXIMUM OUTPUT
AM	1400 KC	30% AM	AM ANT. TERM.	AC-VTVM OR SCOPE	TUNER OUTPUT	1400 KC	OSC. ANT & RF TRIMMERS	MAXIMUM OUTPUT
AM	600 KC	30% AM	AM ANT. TERM.	AC-VTVM OR SCOPE	TUNER OUTPUT	600 KC	OSC COIL LOOPSTICK & RF TRANS	MAXIMUM OUTPUT
AM	1400 KC				REPEAT STEP 2			

REPLACEMENT PARTS LIST FOR MODEL TA230

Part No.	Description	Price
HC33901	FUSE RECEPTACLE	.75
ZCOM3299	FUSE 4 AMP 3AG	.20
FT2783186	POWER TRANSFORMER	18.50
FT2783187	OUTPUT TRANSFORMER	10.25
JE2783168	ELECTROLYTIC CAPACITOR 150 MFD/150V	2.35
JE2783169	ELECTROLYTIC CAPACITOR 200 MFD/250V/200 MFD/50V	3.50
JE2783170	ELECTROLYTIC CAPACITOR 30-30 MFD/350V	2.20
JE2783172	ELECTROLYTIC CAPACITOR 60-80 MFD/400V	3.80
JE2502988	ELECTROLYTIC CAPACITOR 50-40-40 MFD/200V	2.50
ER2783175	FUNCTION SWITCH	3.50
ER2783305	MODE SWITCH	1.40
RV2783303	BALANCE CONTROL GANGED TANDEM	2.00
RVCOM3368	LOUDNESS CONTROL	2.60
RV2783207	CONTROL (TREBLE & BASS)	2.50
EP2783298	POWER SWITCH	.80
P2783196	DIAL GLASS	1.25
JV2783183	AM VARIABLE CONDENSER	4.75
JV2783184	FM VARIABLE CONDENSER	4.85
STCOM3011	AM OSC. COIL	.75
GT2783362	IF TRANSF. 1st & 3rd FM	1.60
GT2783363	IF TRANSF. 2nd FM	1.60
CT2493012	RF TRANSF.	2.00
GT2493013	IF TRANSF. 1st AM	1.30
GT2493014	IF TRANSF. 2nd AM	1.50
Z2382924	SILICON RECT. 300 PIV	3.25

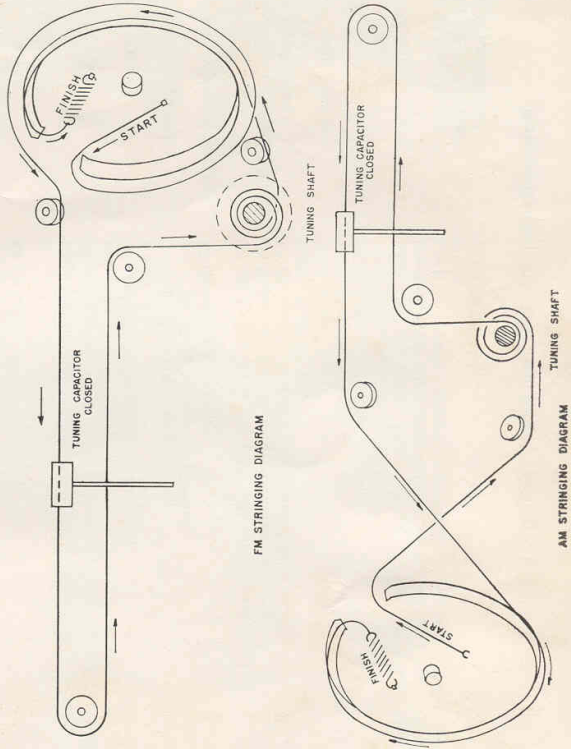

FM STRINGING DIAGRAM

AM STRINGING DIAGRAM