



**LAFAYETTE**

**COMPLETE  
PARTS LIST**

**MODEL  
LR-1500TA  
[99-01950WX]**

**AM/FM STEREO  
RECEIVER**



Circuit Designation	Description	Lafayette Part No.
	Cage	6300-10
	Rear Panel	6301-10
	Bottom Plate	6302-10
	Escutcheon Plate	6303-10
	Dial Back Plate	6304-10
	Insulating Cover TR-7	6305-10
	Mounting Bracket (Tuning Shaft)	6306-10
	Track (Dial Pointer)	6307-10
	Dial Pointer	6308-10
	Mounting Insulator (Bar Antenna)	6309-10
	Heat Sink (TR-7)	6310-10
	Mounting Bracket (Thermistor)	6311-10
	Mounting Bracket (Meter)	6312-10
	Mounting Bracket (Stereo Indicator)	6313-10
	Base Bracket (Antenna Mounting)	6314-10
	Swivel Bracket (Antenna)	6315-10
	Bracket (Tuning Shaft)	6316-10
	Mounting Bracket (Dial Light)	6317-10
	Mounting Bracket (Indicator Light)	6318-10
	Stud (Power Transformer)	6319-10
	Spacer (Power Transformer)	6320-10
	Mounting Bracket (Tuning Shaft)	6321-10
	Tuning Shaft Bushing	6322-10
	Tuning Shaft	6323-10
	Shelter (Indicator Light Center)	6324-10
	Shelter (Indicator Light Sides)	6325-10
	Wire Crammer	6326-10
	Mounting Spring (Dial Glass)	6327-10
	Dial Pulley	6328-10
	Flywheel	6329-10
	Coil Spring (Dial Pulley)	6330-10
	Insulator (TR-3)	6331-10
	E Stop Ring	6332-10
	C Stop Ring	6333-10
	Eyelet	6334-10
	Shield Plate (Largest)	6335-10
	Shield Plate (Middle)	6336-10
	Shield Plate (Smallest)	6337-10
	Shield Cover (Large)	6338-10
	Shield Cover (Small)	6339-10
	Heat Sink	6340-10
RV-1	Volume/Balance (50K)	1557-11
RV-301, 302	Bass/Treble (500K)	1558-11

Circuit Designation	Description	Lafayette Part No.
C107, C1, 2	Ceramic Capacitor 10PF	1107-12
C3	Paper Capacitor .001 PF	2978-12
C218, 219	Ceramic Capacitor .0047	2997-12
C6	2200 PF Styroflex	2998-12
C212	.003 mfd Mylar	2825-12
C9, 10	.01 mfd Mylar	2992-12
C150	680 PF Ceramic	2993-12
C13, 14	.15 mfd Mylar Capacitor	2979-12
C16	5000 mfd 70v Elyt.	1932-12
C17-C18	2000 mfd 50v Elyt.	1931-12
C-19	2 mfd 150v Pigtail	1013-12
C-104	.022 mfd Ceramic	2357-12
C111, C112	.5 PF Ceramic	2125-12
CT-104	Ceramic Trimmer	2980-12
CT101-103,105-107	Tuning Capacitor	2981-12
CR-101,104,106	C-R Module CR-101, 104-106	2982-12
CR-102	C-R Module CR-102	2983-12
CR-103	C-R Module CR-103	2984-12
CR-105	C-R Module CR-105	2985-12
C-203	10mfd 16v Elyt.	2986-12
C210, 213	1 mfd 50v Elyt.	2987-12
C416	47 mfd 50v Elyt.	2988-12
C130	82 PF Ceramic	2994-12
C131	68 PF Ceramic	2995-12
C132	15 PF Ceramic	2996-12
C406	470 mfd 6v Elyt.	2989-12
C404	4.7 mfd 16v Elyt.	2990-12
CR1, CR2	CR Module 1 & 2	2991-12
RV-101	Variable Resistor (2 Terminal) (20K)	2338-13
RV 201-202	Variable Resistor (5K)	2339-13
RV 203-204	Variable Resistor (1K)	2340-13
R-430	Wirewound Resistor (.1 $\Omega$ )	2341-13
RV 401-402	Variable Resistor 100K	2342-13
RV 301-302	Variable Resistor 500K	2343-13
RV 405-406	Variable Resistor 10K	2344-13
RV 401-402	Variable Resistor 100KB	2334-13
RV 403-404	Variable Resistor 500KB	2335-13
RV 405-406	Variable Resistor 10KB	2336-13
RV 407-408	Variable Resistor 1KB	2337-13
S1	Selector Switch	1690-14
S2	Mode Switch	1691-14
S3	Monitor Switch (Select)	1692-14

Circuit Designation	Description	Lafayette Part No.
S4, 5, 6	See-Saw Switch	1693-14
S7, 8	Speaker Switch	1694-14
S9	Slide Switch	1695-14
T1	Power Transformer	1612-15
Q1	2SD-238	1994-17
Q2	2SD-236	1995-17
Q3, Q5	2SC-485	1804-17
Q4, Q6	2SA-485	1889-17
Q7-Q10	DF-2	1729-17
RS 401-402	Thermistor RS 401-402 (14D47)	1996-17
D1-D4	Diode (5B3)	1997-17
RS-1	Thermistor RS-1 (31D26)	1616-17
Q104	2SC-829 (B)	1998-17
Q105	2SC-829 (C)	1999-17
Q106	2SC-828 (o)	2000-17
Q107	2SC-828 (p)	2001-17
Q108	2SA-564 (P)	2002-17
Q109	2SC-828 (S)	2003-17
D101-111, 114	Diode IS-446 or IS34	1012-17
D112	Diode SD-IS	2004-17
D113	Diode VO-6C	2005-17
D404	Zener Diode	2006-17
D 201, 202, 205-208	Diode IS 1555	1937-17
Q206, 208	2SC-644 (S)	2007-17
Q207, 209	2SC-644 (T)	2008-17
Q210	2SC-828A (S)	2009-17
Q301, 302	2SK-30	2010-17
Q403 LR	2SD-221	1957-17
	Knob (Tuning)	1698-18
	Knob (SP Mode)	1699-18
	Knob (Selector)	1700-18
	Knob (Double Upper)	1701-18
	Knob (Double Lower)	1702-18
	Antenna Terminal	1854-19
	RCA Jack (5P)	1855-19
	RCA Jack (1P)	1856-19
	Speaker Terminal	1857-19
	Stereo Phone Jack	1858-19
	1P Lamp Socket	1859-19
	Transistor Socket	1860-19
	Lug Terminal (1L-2P)	1861-19
	Fuse Holder	1862-19

Circuit Designation	Description	Lafayette Part No.
	Dial Glass Lamp	3715-20
	Stereo Indicator	3716-20
	Indicator Jewel (Amber)	3717-20
	Indicator Jewel (Green)	3718-20
	Indicator Jewel (Blue)	3719-20
	Antenna Catcher	3720-20
	Plastic Roller Guide (Long)	3721-20
	Plastic Roller Guide (Short)	3722-20
	Dial Glass	3723-20
	Green Film Meter Light	3724-20
	Plastic Roller	3725-20
	Plastic Foot	3726-20
	Net	3727-20
L101	Peaking Coil L-101	2282-23
L102, 105	Choke Coil L-102-105	2283-23
T201	67 KHZ Trap Coil	2284-23
T202,	67 KHZ Trap Coil	2285-23
T203	19 KHZ Trap Coil	2286-23
T204	Noise Transformer T-204	2287-23
T205	19 KHZ T-205	2288-23
T206	19 KHZ T-206	2289-23
T207	38 KHZ Transformer	2290-23
L1	Choke Coil	2291-23
L2	Choke Coil	2292-23
T101	FM Antenna Transformer	1960-24
T102	FM RF Transformer	1961-24
T104	FM Osc Transformer	1962-24
T105-108	FM IF Transformer	1963-24
T109	FM Disc. Transformer	1964-24
T110	AM RF Transformer	1965-24
T111	AM Osc Transformer	1966-24
T112-113	AM IF Transformer	1967-24
T114	AM Det. Transformer	1968-24
IC101-103	μA-703 I. C.	1000-25
M1	Tuning Meter	1148-27
	Manual	1660-30
	Bar Antenna	1160-39
	P. C. Board	1429-16
	P. C. Board	1430-16
	P. C. Board	1431-16
	P. C. Board	1432-16
	P. C. Board	1433-16
	P. C. Board	1434-16
	P. C. Board (Popping Conversion Board)	