SCHEMATIC DIAGRAM

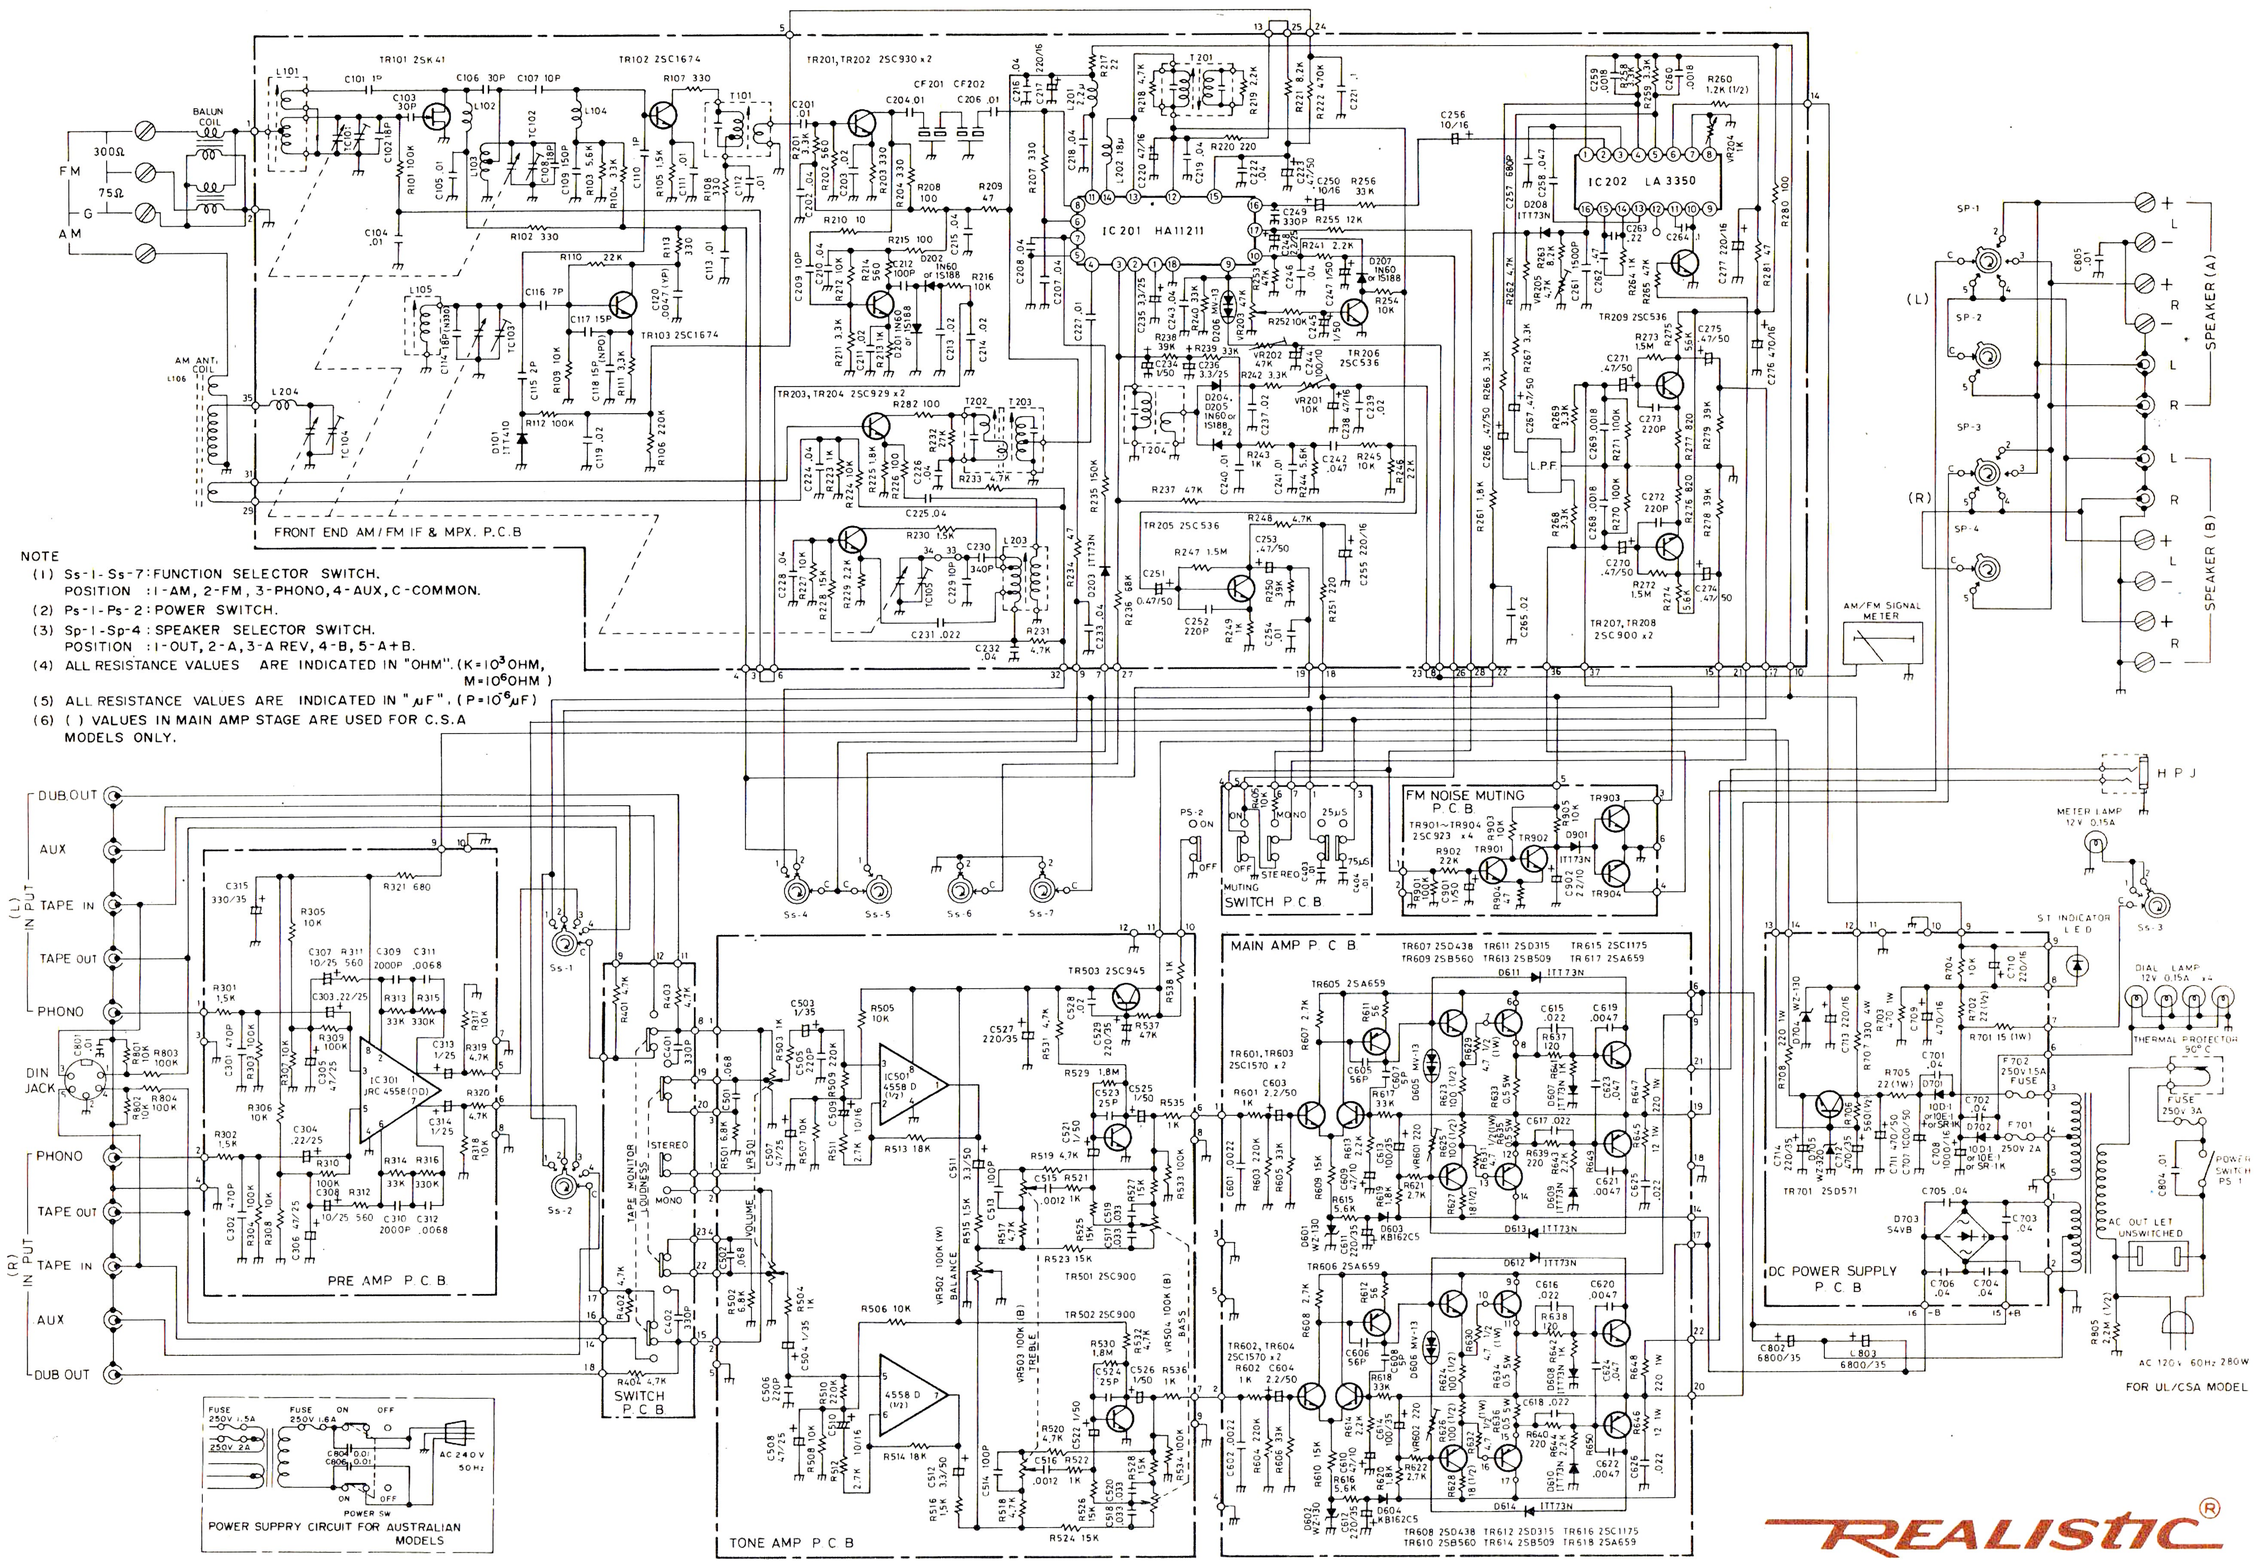

NOTE

(1) Ss-1-Ss-7: FUNCTION SELECTOR SWITCH.
POSITION : 1-AM, 2-FM, 3-PHONO, 4-AUX, C-COMMON.

(2) Ps-1-Ps-2: POWER SWITCH.

(3) Sp-1-Sp-4 : SPEAKER SELECTOR SWITCH.
POSITION : 1-OUT, 2-A, 3-A REV, 4-B, 5-A+B.

(4) ALL RESISTANCE VALUES ARE INDICATED IN "OHM". ($K=10^3$ OHM, $M=10^6$ OHM)

(5) ALL RESISTANCE VALUES ARE INDICATED IN "μF". ($P=10^{-6}\mu$F)

(6) ( ) VALUES IN MAIN AMP STAGE ARE USED FOR C.S.A MODELS ONLY.

REALISTIC®