

PIONEER

AM

TUNING INDICATOR

AM TUNER AMPLIFIER model AX-330

OFF ON

POWER

PHONES

FLAT

MIN MAX

BASS

FLAT

MIN MAX

TREBLE

LEFT RIGHT

MIN MAX

VOLUME

PUSH ON

LOUDNESS

PHONO
AUX/TAPE PB

SELECTOR


TUNING

AM RECEIVER AX-330

UNIT	ROUND LABEL	YAW					
TUNER UNIT							
FM FRONT END							
FM IF UNIT							
MPX UNIT							
AM TUNER UNIT		W14-015					
MUTING UNIT							
AF UNIT		W15-084					
CONTROL AMP UNIT							
MAIN AMP UNIT							
POWER SUPPLY UNIT							
SWITCH UNIT							
SWITCH UNIT							
SWITCH UNIT							
TONE COLOR UNIT							
CONTROL UNIT							
MIC AMP UNIT							
REVERBE AMP UNIT							
REVERBE UNIT							
INDICATOR UNIT							



AX-330

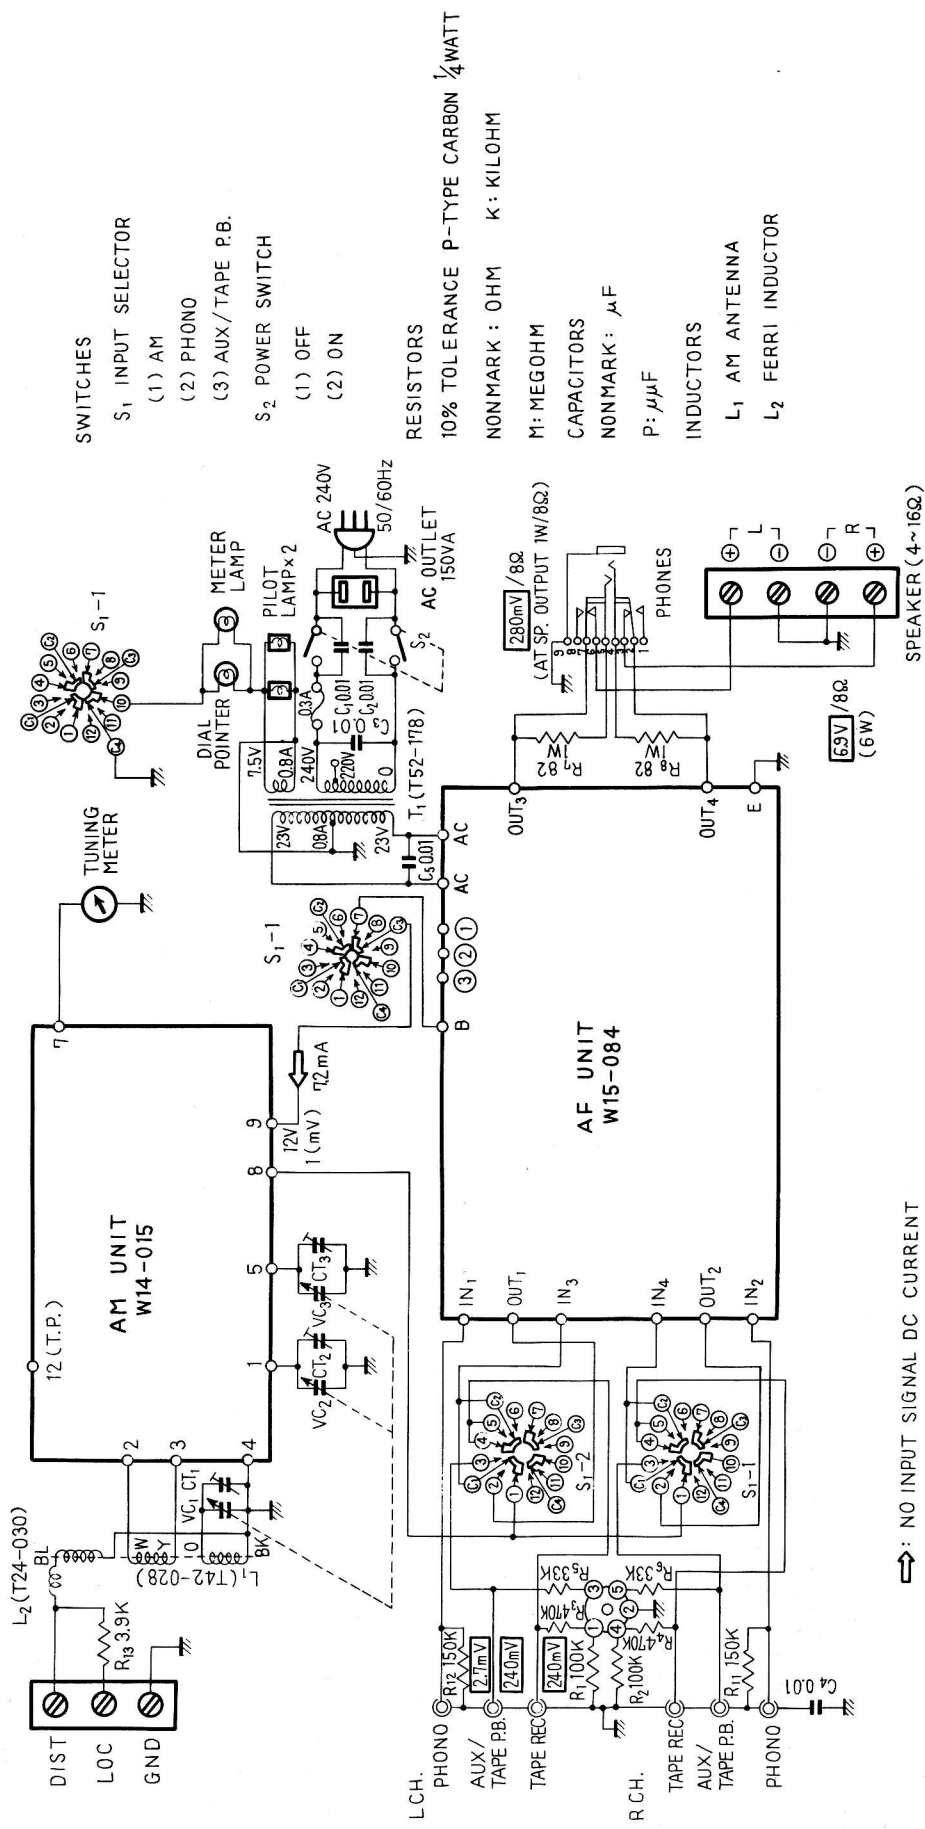

SWITCHES
S₁ INPUT SELECTOR
(1) AM
(2) PHONO
(3) AUX/TAPE P.B.

S₂ POWER SWITCH
(1) OFF
(2) ON

RESISTORS
10% TOLERANCE P-TYPE CARBON 1/4 WATT

NONMARK : OHM K : KILOHM

M : MEGOHM

CAPACITORS

NONMARK : μF

P : μμF

INDUCTORS

L₁ AM ANTENNA

L₂ FERRI INDUCTOR

SPEAKER (4~16Ω)


⇨ : NO INPUT SIGNAL DC CURRENT

V : NO INPUT SIGNAL DC VOLTAGE

▭ : SIGNAL VOLTAGE AT 5W/8Ω (1KHz)


AM TUNER UNIT

W14-015

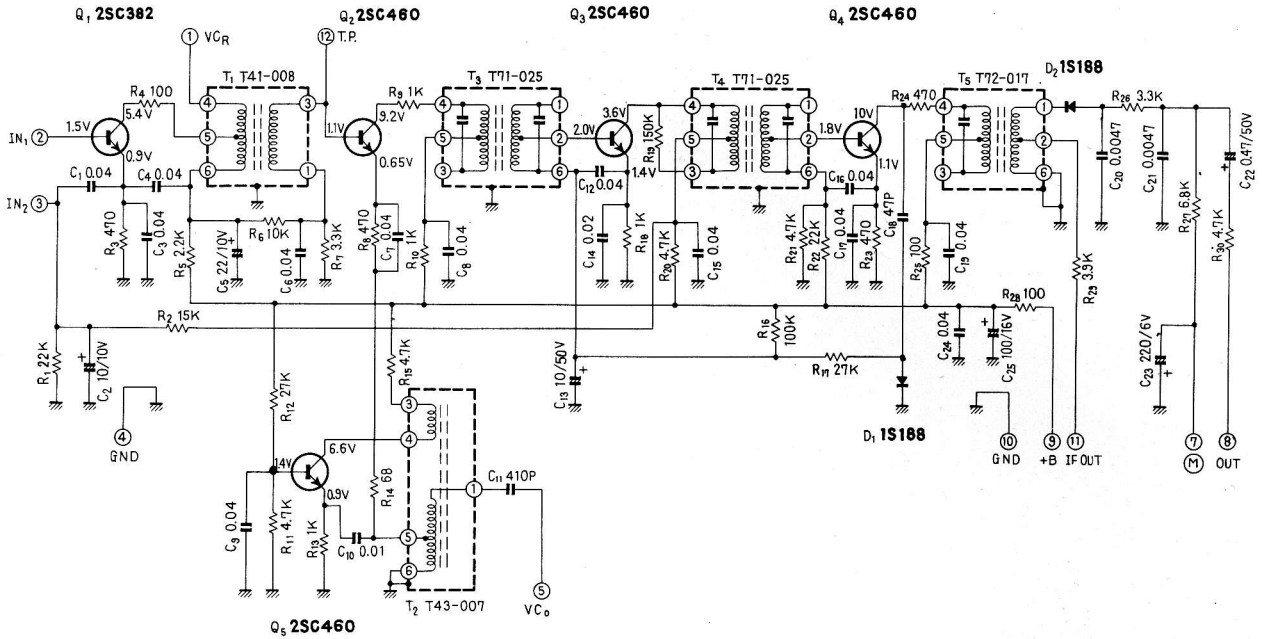

AF UNIT

W15-084

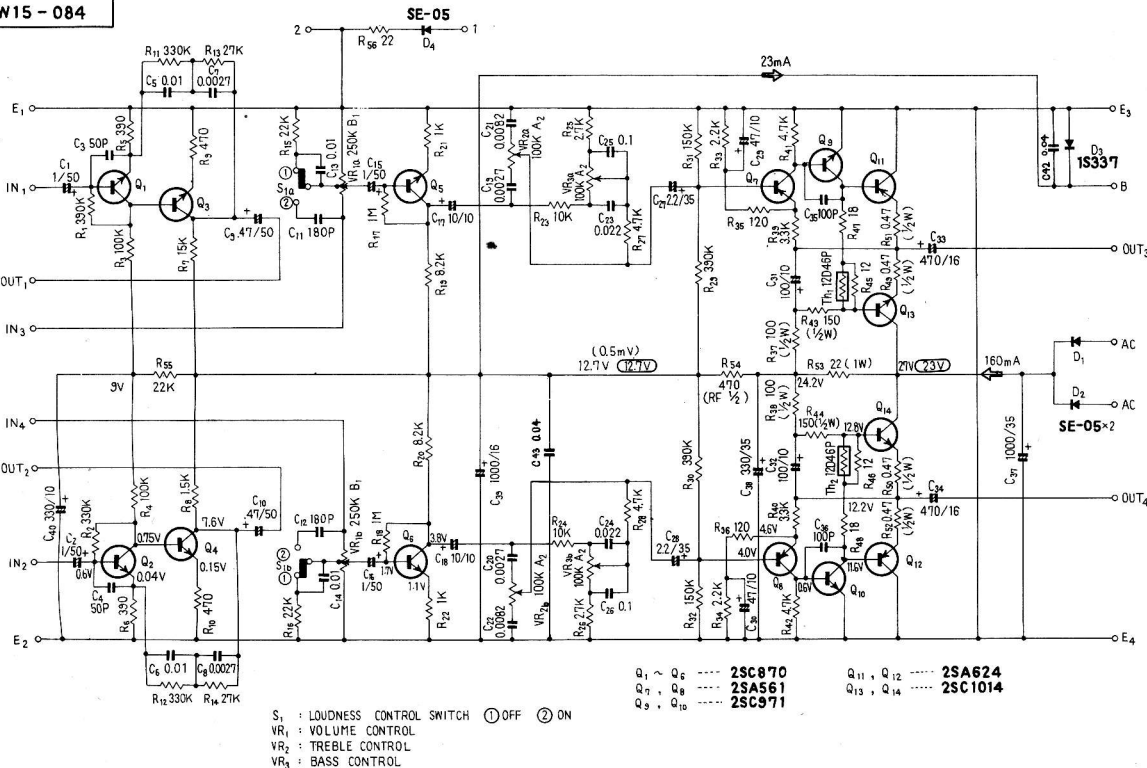

S₁ : LOUDNESS CONTROL SWITCH ① OFF ② ON
 VR₁ : VOLUME CONTROL
 VR₂ : TREBLE CONTROL
 VR₃ : BASS CONTROL

Q₁ : 2SC870
 Q₂ : 2SA561
 Q₃ : 2SC971
 Q₄ : 2SA624
 Q₅ : 2SC1014