


STEREO AMPLIFIER

SA-700

UNIT \ ROUND LABEL	FA	FV	KL			
TUNER UNIT						
FM FRONT END						
FM IF UNIT						
MPX UNIT						
AM TUNER UNIT						
MUTING UNIT						
HEAD AMP UNIT	W15-049	W15-049	W15-049			
CONTROL AMP UNIT	W15-050	W15-050	W15-050			
MAIN AMP UNIT	W15-060	W15-060	W15-060			
POWER SUPPLY UNIT	W16-018	W16-018	W16-018			
SWITCH UNIT	W15-070	W15-070	W15-070			
SWITCH UNIT	W15-083	W15-083	W15-083			
SWITCH UNIT						
TONE COLOR UNIT						
CONTROL UNIT						
MIC AMP UNIT						
REVERBE AMP UNIT						
REVERBE UNIT						
MC AMP UNIT	W15-068	W15-068	W15-068			



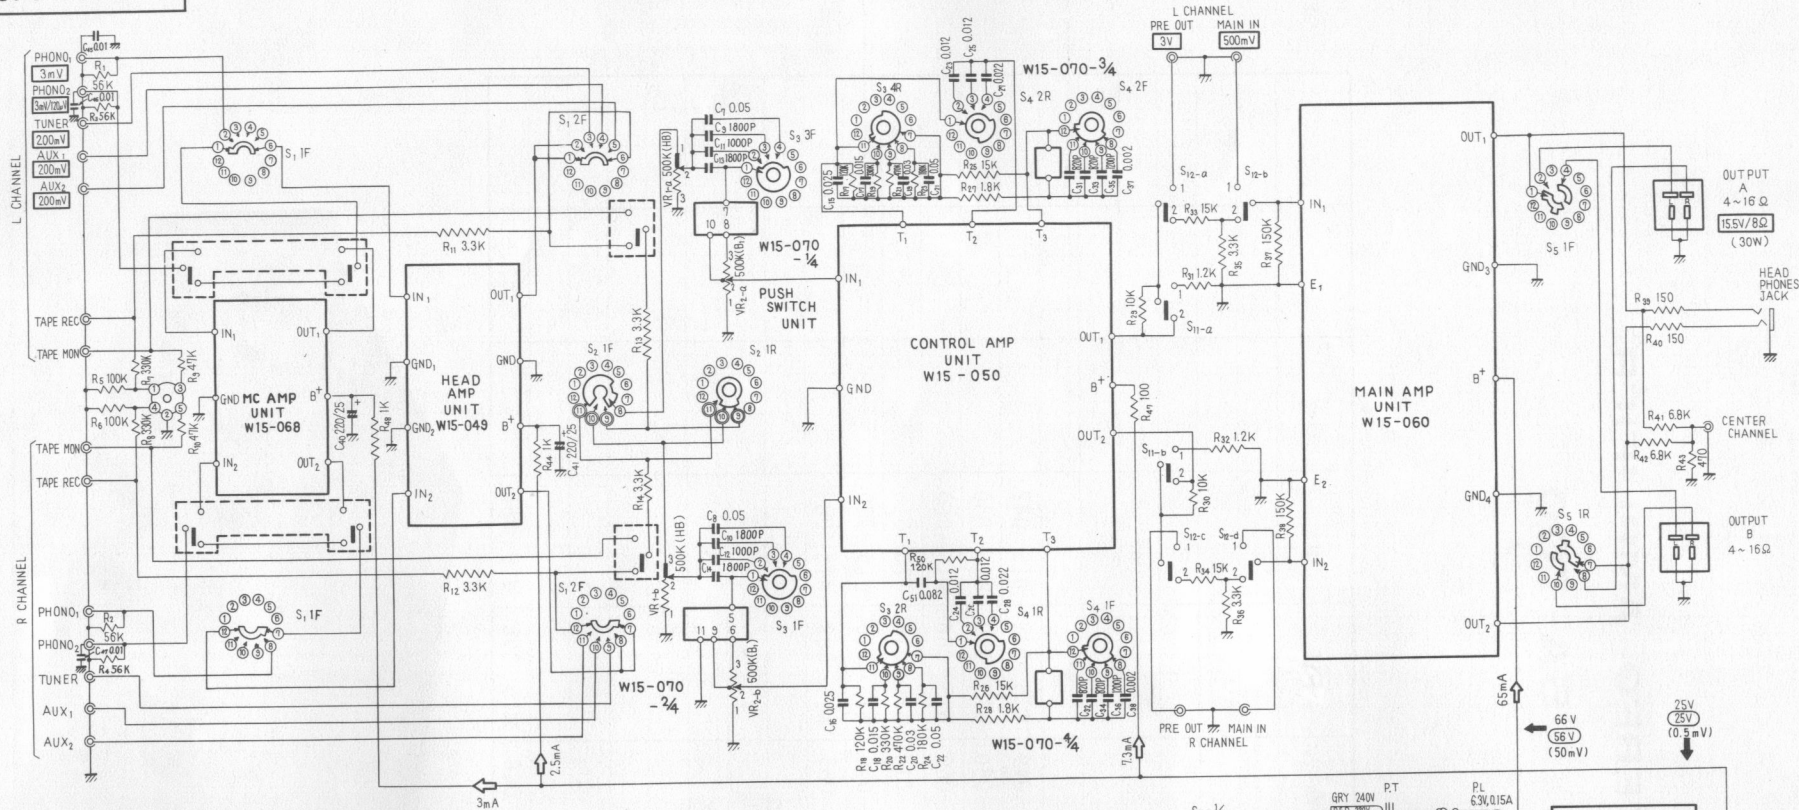

SWITCHES

- S₁ INPUT SELECTOR**
 (1) PHONO 2
 (2) PHONO 1
 (3) TUNER
 (4) AUX 1
 (5) AUX 2

- S₂ MODE**
 (1) STEREO REV
 (2) STEREO NORM
 (3) MONO L
 (4) MONO R
 (5) MONO L+R

- S₃ BASS CONTROL**
 -9dB ~ +12dB (at 100Hz)

- S₄ TREBLE CONTROL**
 -12dB ~ +9dB (at 10kHz)

- S₅ OUTPUT SELECTOR**
 (1) POWER OFF
 (2) A
 (3) SPKR'S OFF
 (4) B
 (5) A+B

- S₁₁ MUTING** ① -20dB ② 0dB

- S₁₂ PRE & MAIN IN SEP.** ① INTER-COUPL.

⊠ : INCLUDED IN W15-070 (PUSH SWITCH UNIT)

POTENTIOMETERS

- VR₁ BALANCE CONTROL**
VR₂ VOLUME CONTROL

RESISTORS

NON MARK: OHM, K: KILOHM, M: MEGOHM

CAPACITORS


NON MARK: μ F
 P: μ F

⇒ : NO INPUT SIGNAL
 DC CURRENT
 → : DC VOLTAGE
 V : NO SIGNAL INPUT


○ V : AT 30W/8 Ω ONE CHANNEL
 OUTPUT

□ V : SIGNAL VOLTAGE AT 30W/8 Ω (1kHz)

ITEM NO.	VACANT
R ₁ ~ R ₄₈	R ₁₅ , 16, 45, 46
C ₁ ~ C ₄₄	C ₁₋₆ , 25, 30

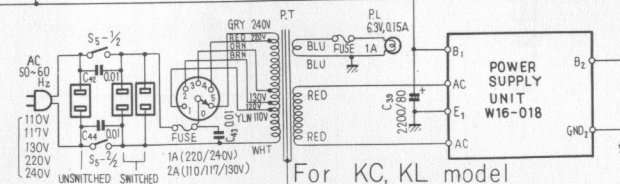

For KC, KL model

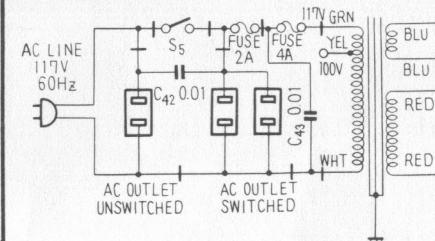


HEAD AMP UNIT

CONTROL AMP UNIT


HEAD AMP UNIT

W15 - 049

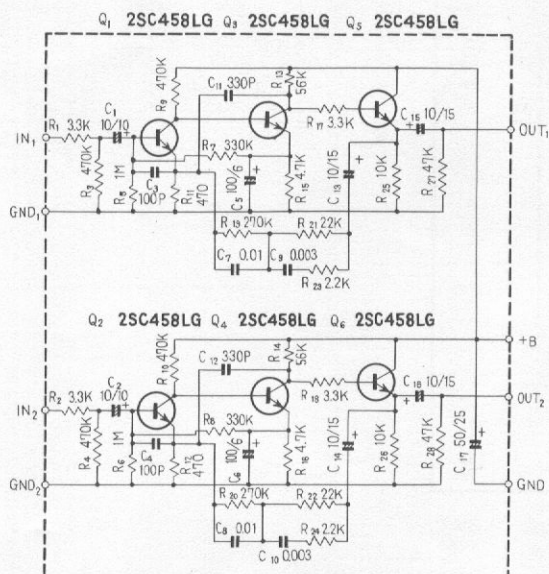

CONTROL AMP UNIT


W15 - 050

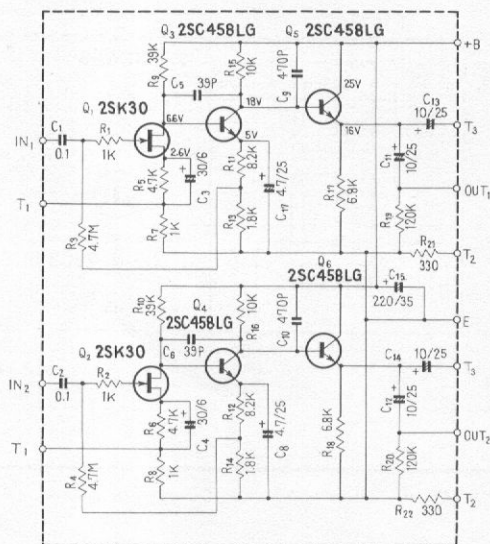

MAIN AMP UNIT

MAIN AMP UNIT


W 15 - 060

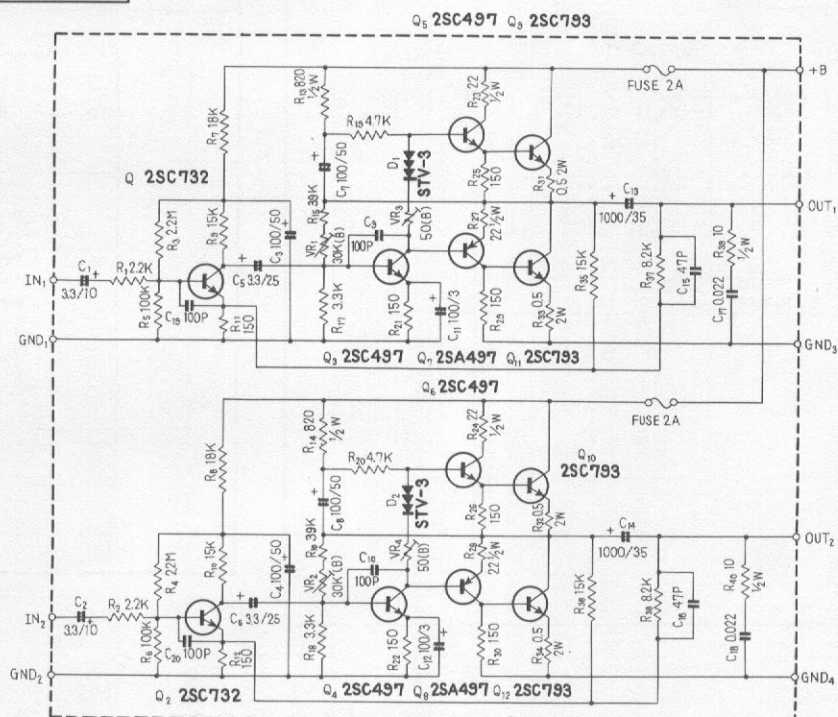

POWER SUPPLY UNIT

POWER SUPPLY UNIT


W16 - 018

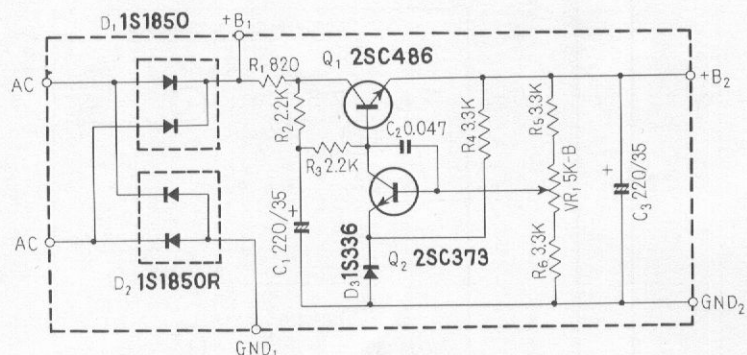

MC AMP UNIT

MC AMP UNIT

W15 - 068

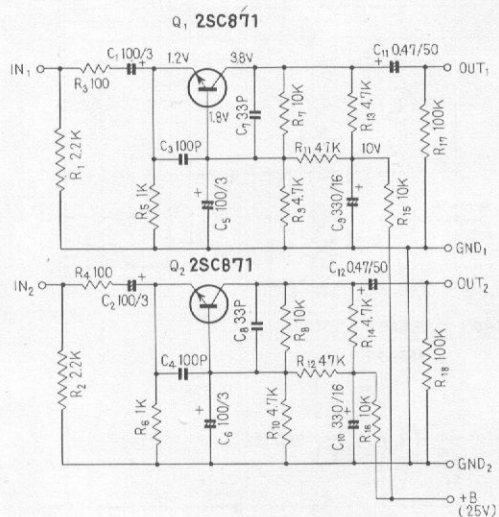

PUSH SWITCH UNIT

PUSH SWITCH UNIT

W15-070

