


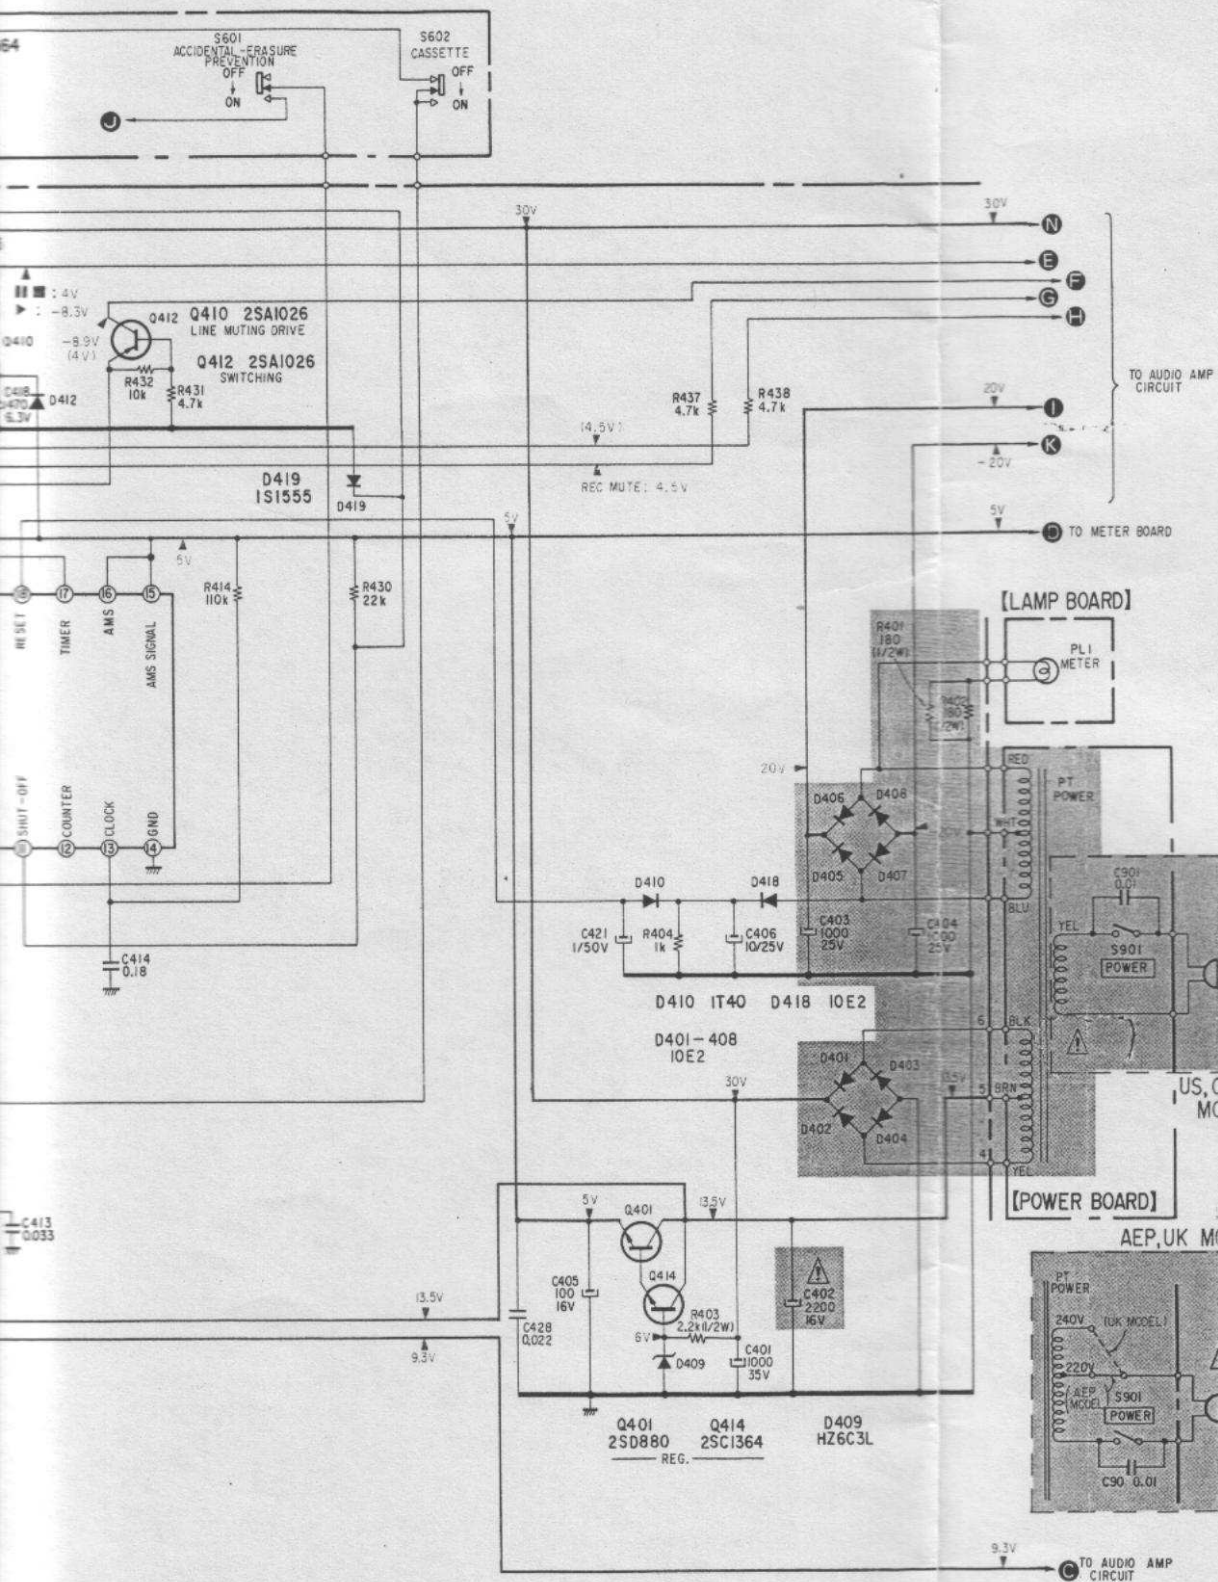


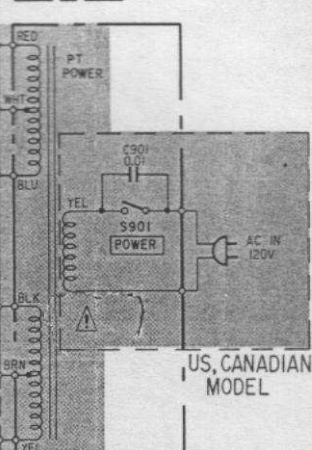


[LAMP BOARD]



[POWER BOARD]

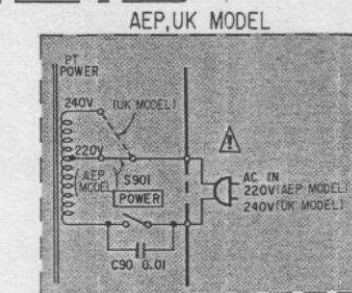

E MODEL

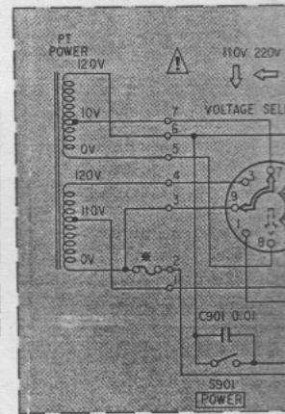

- Note:
- All capacitors are in μF unless otherwise noted. pF : μF 50WV or less are not indicated except for electrolytics and tantalums.
 - All resistors are in ohms, $\frac{1}{2}\text{W}$ unless otherwise noted. $\text{k}\Omega$: 1000 Ω , $\text{M}\Omega$: 1000 $\text{k}\Omega$
 - — : B+ bus.
 - --- : B- bus.
 - Voltages are dc with respect to ground unless otherwise noted.
 - Readings are taken under no-signal conditions with a VOM (20 $\text{k}\Omega/\text{V}$).





no mark: STOP
■ : STOP
▲ : FWD
▼ : REW
▶▶ : FF
● : REC
■ : PAUSE

- Voltage variations may be noted due to normal production tolerances.
- Switches

Ref. No.	Switch	Position
S601	ACCIDENTAL ERASER PREVENTION	OFF
S602	CASSETTE	OFF
S603	TIMER	OFF
S801	STOP	OFF
S802	REW	OFF
S803	FF	OFF
S804	FWD	OFF
S805	REC	OFF
S806	PAUSE	OFF
S807	REC MUTE	OFF
S901	POWER	OFF

Note: The components identified by shading and mark ∇ are critical for safety. Replace only with part number specified.

Note: Les composants identifiés par une trame et une marque ∇ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

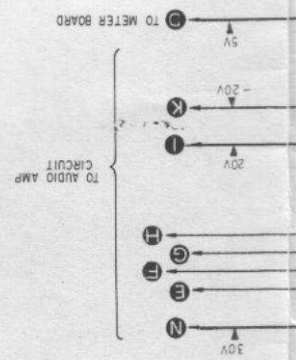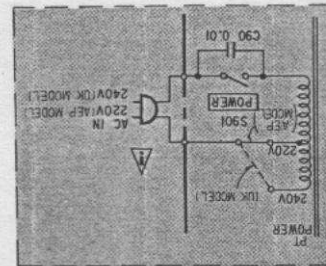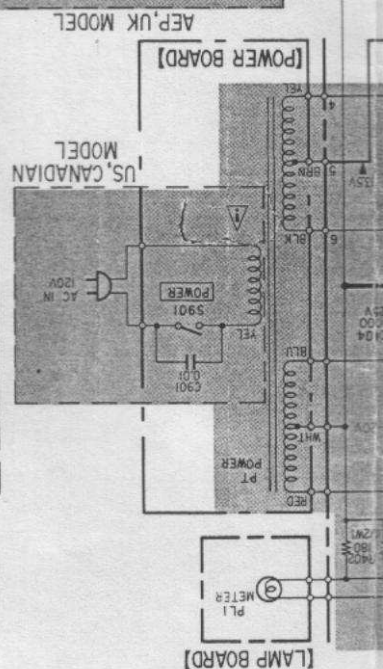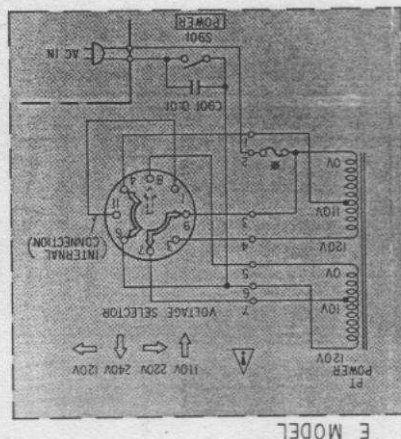



TC-FX4 X4

